

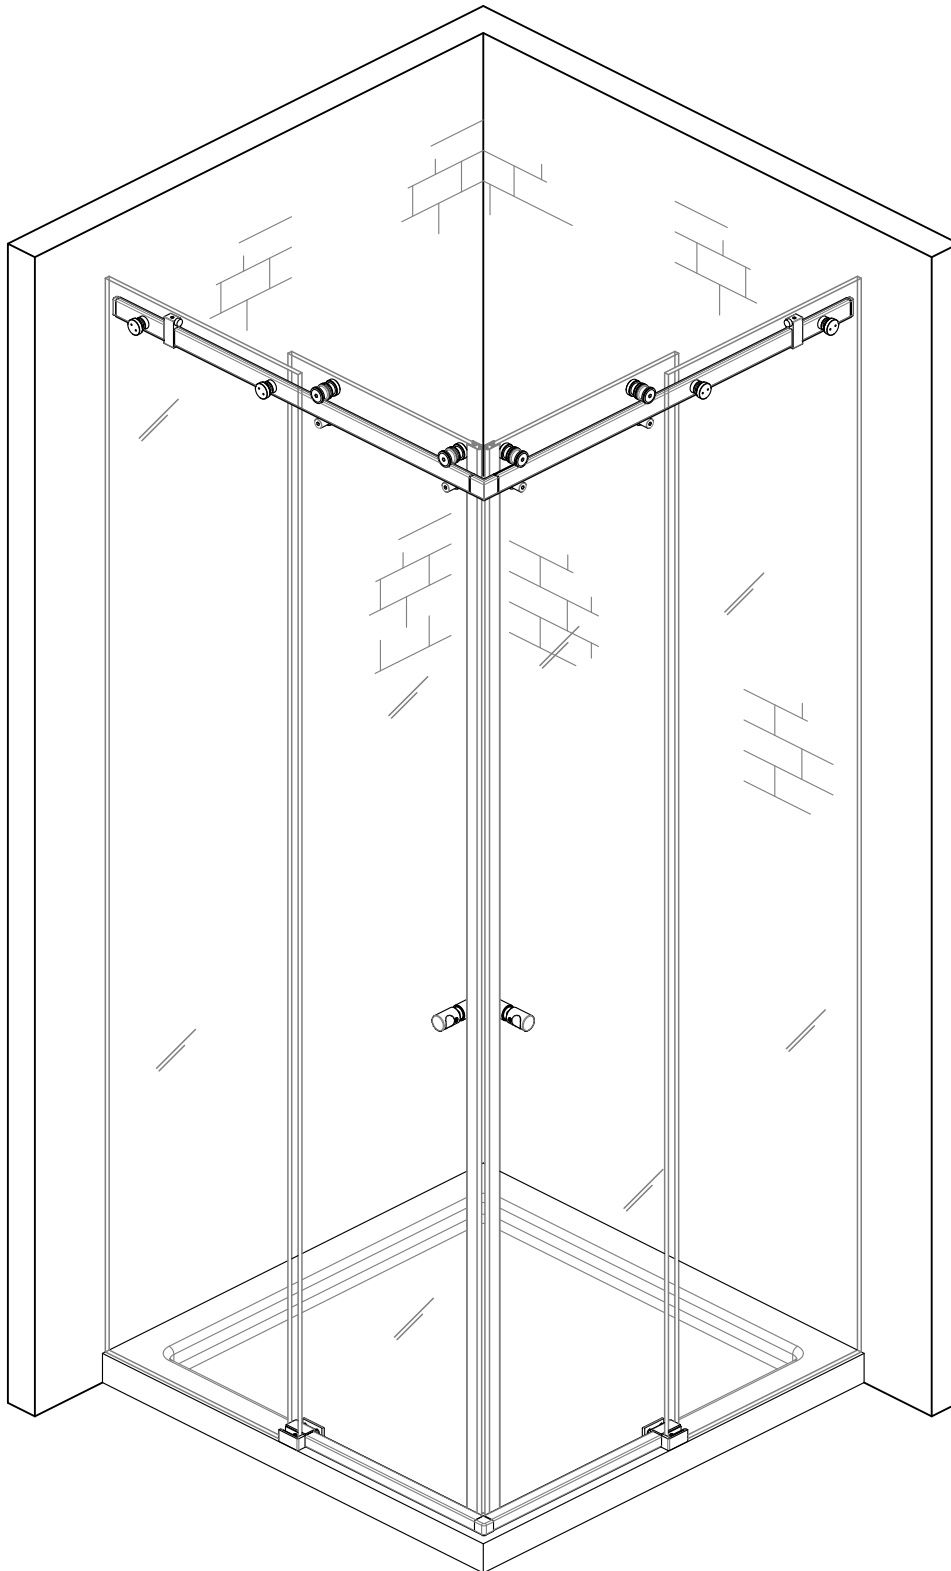
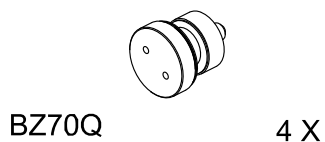
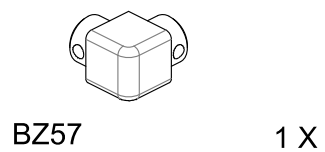
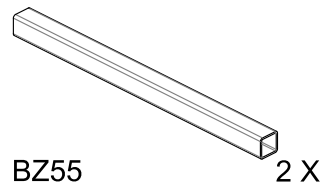
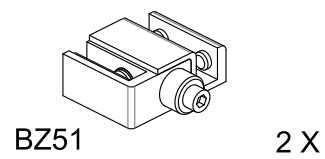
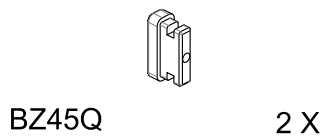
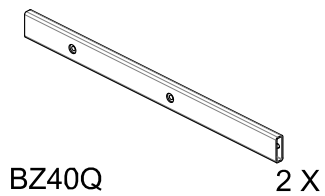
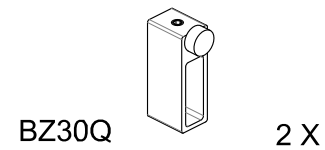


BZQ0  
SHOWER BOXE "HIP ZAC"  
CORNER KIT - SQUARE SECTION

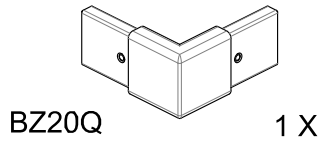


Installation instructions


Packing List

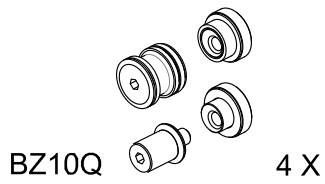


Optionals parts

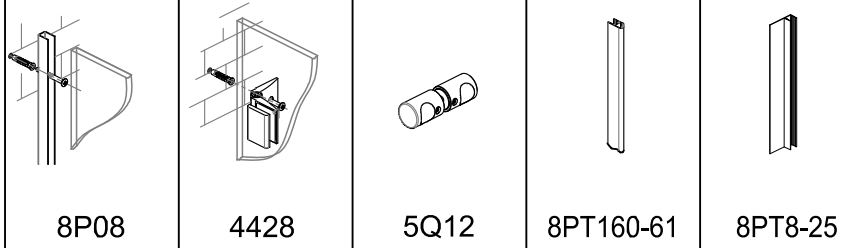


Tools supplied


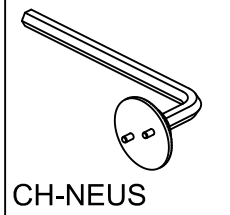


Tools required

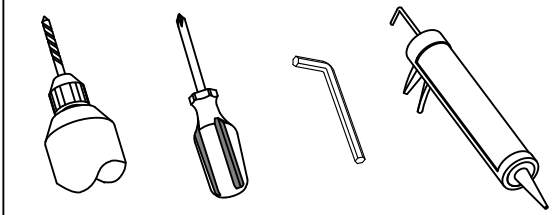

Fittings required

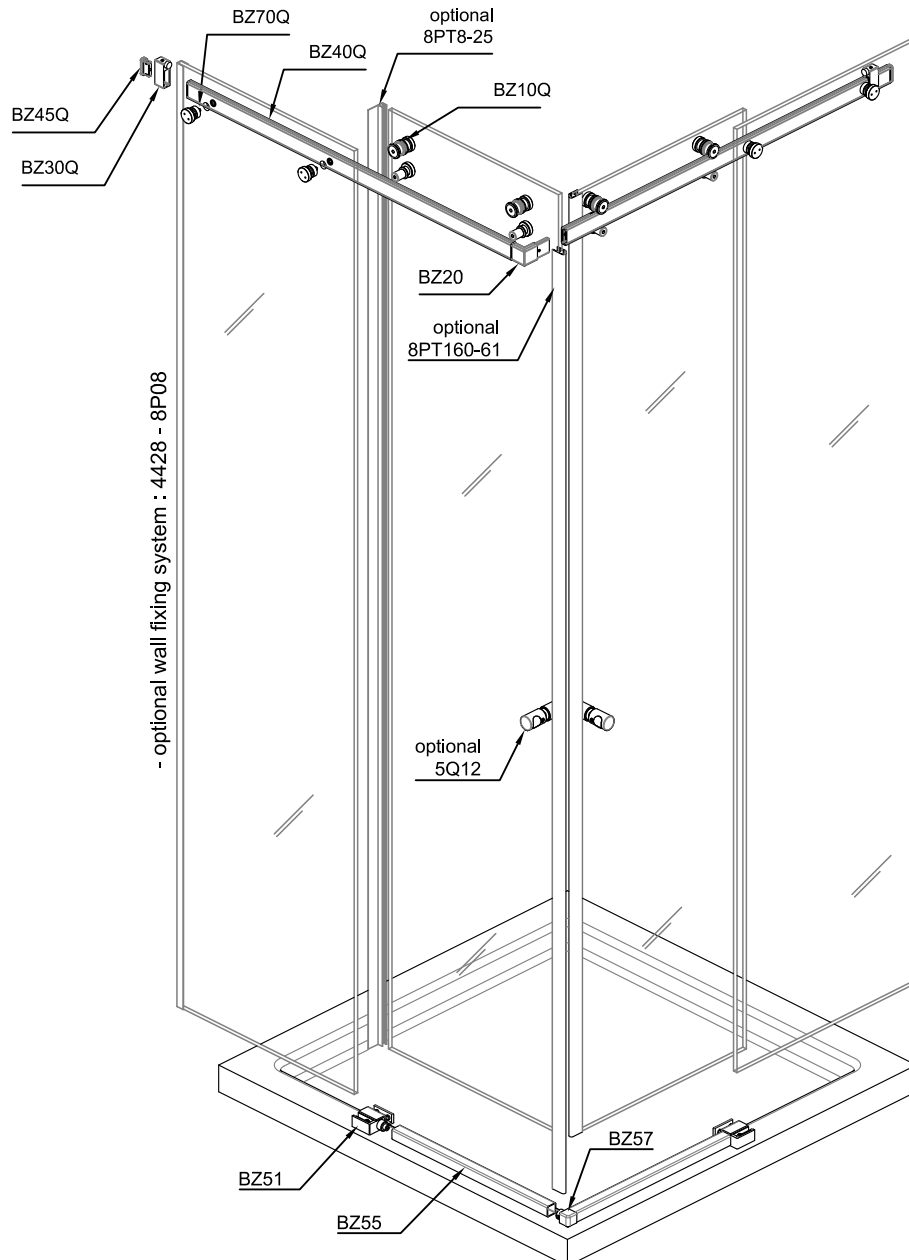

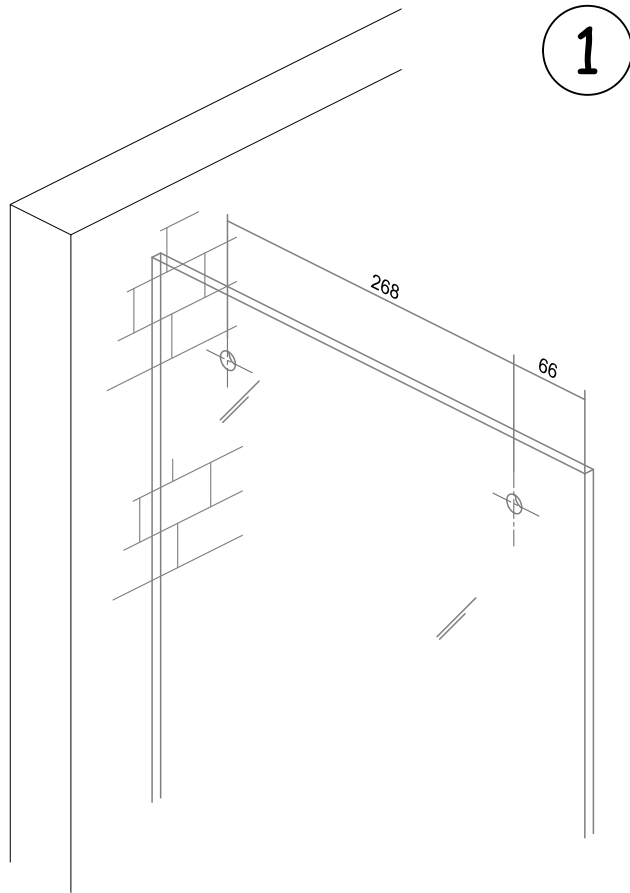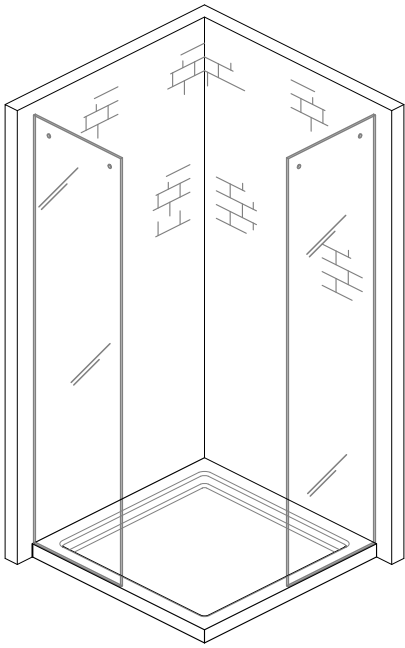



<p>n x</p>	<p>optional 8P08</p>	<p>1A</p> <p>8P08</p> <p>5</p>
------------	----------------------	--------------------------------

<p>2 x</p>	<p>optional 4428</p>	<p>1B</p> <p>4428</p>
------------	----------------------	-----------------------





adattare la lunghezza  
adjust the length


2

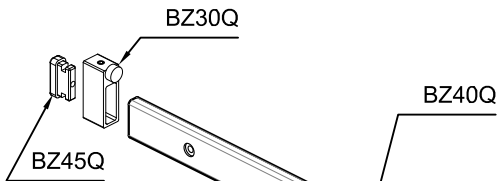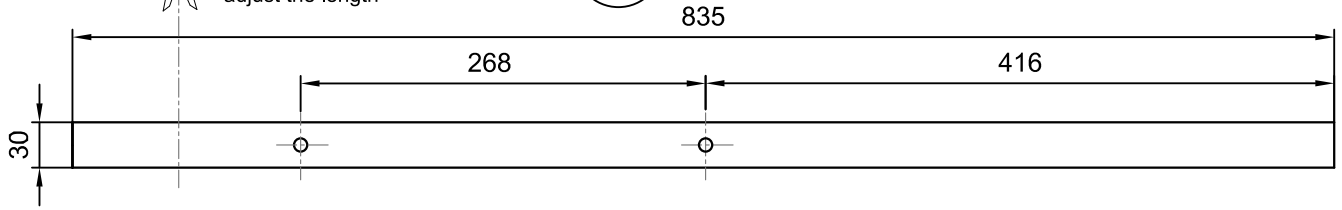


3




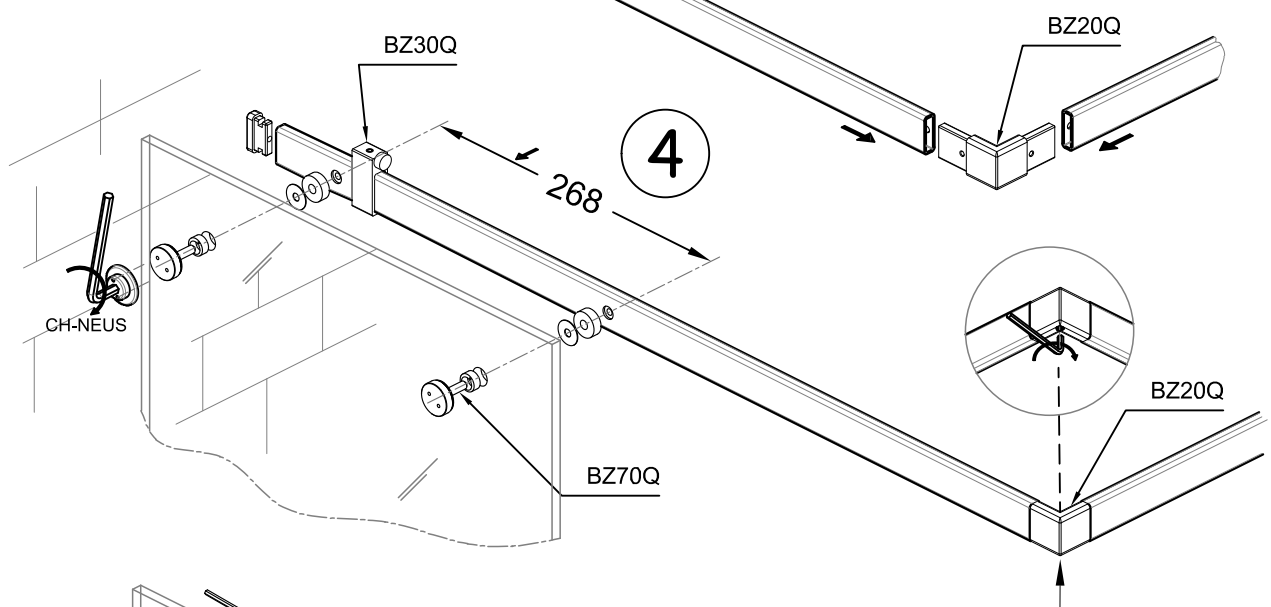
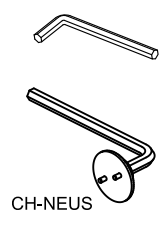









4

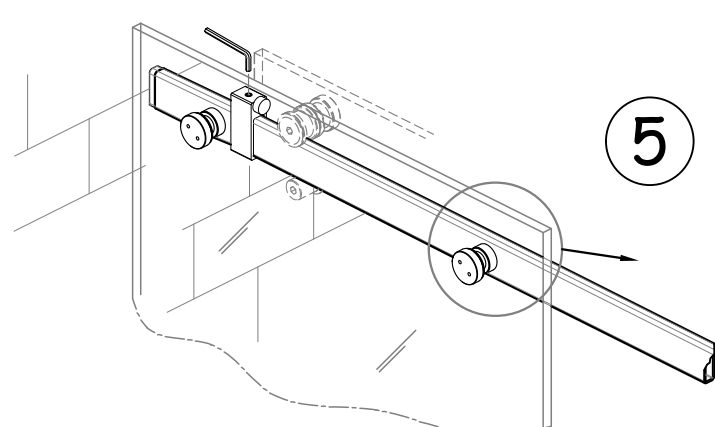

5

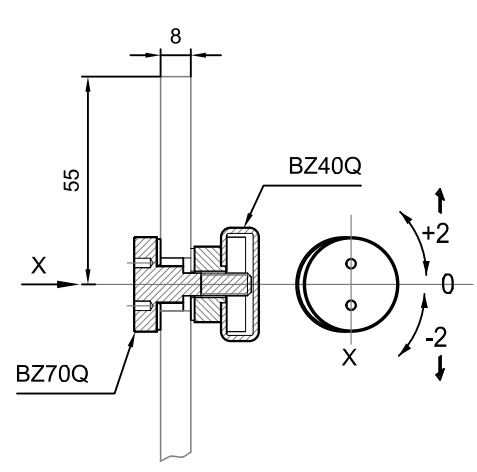

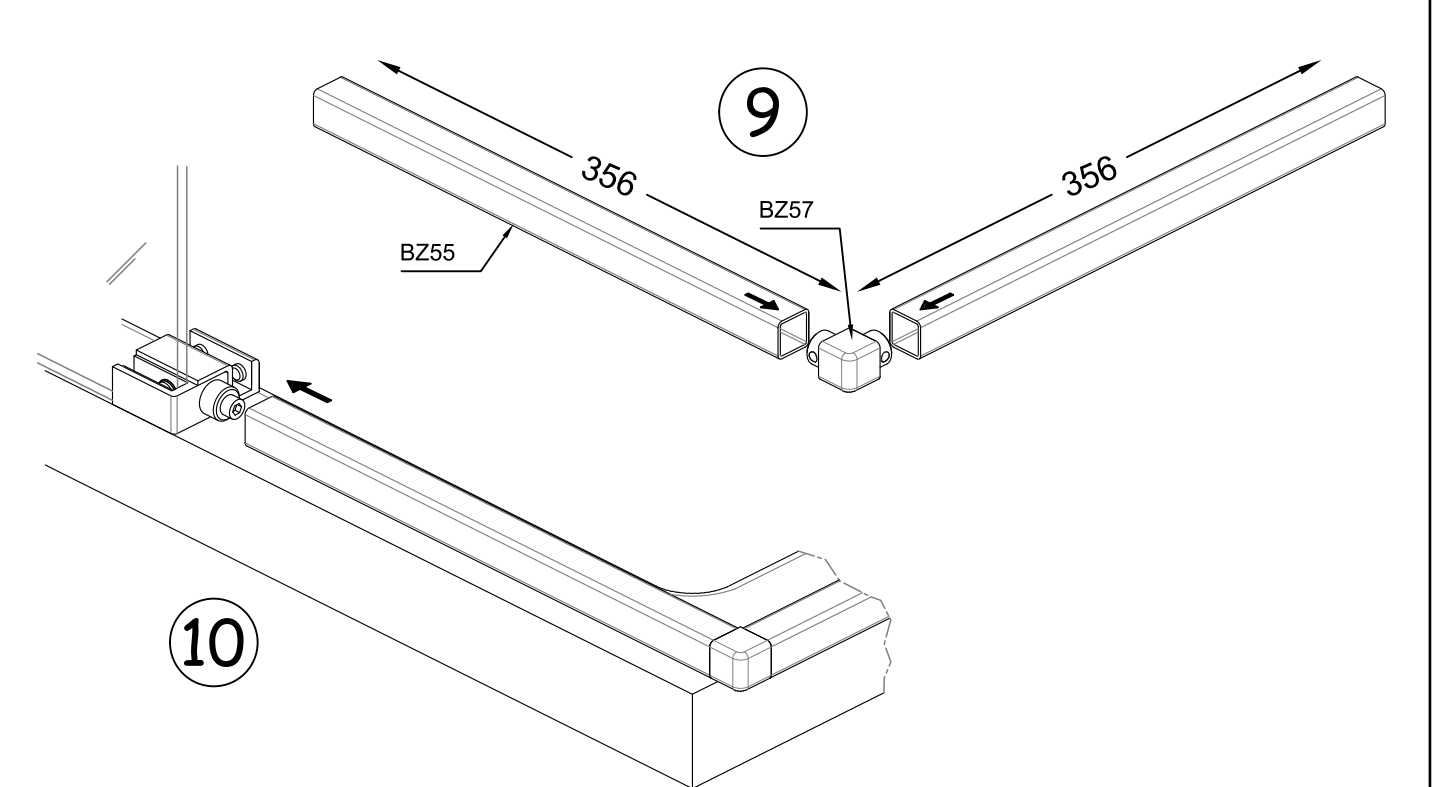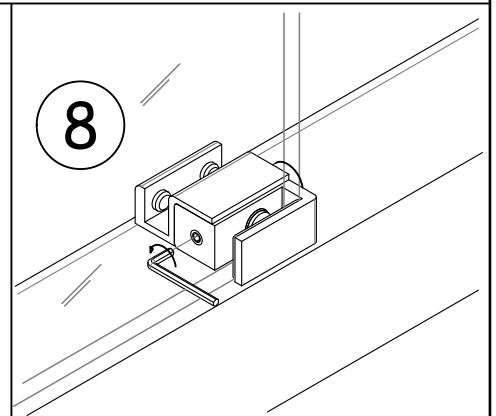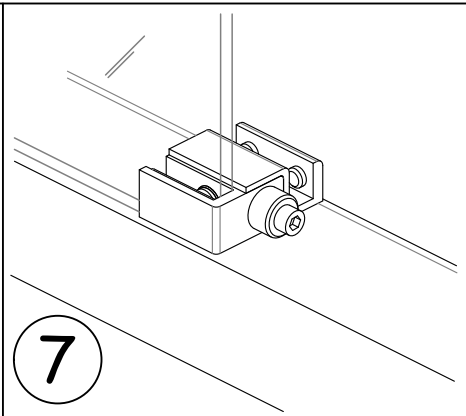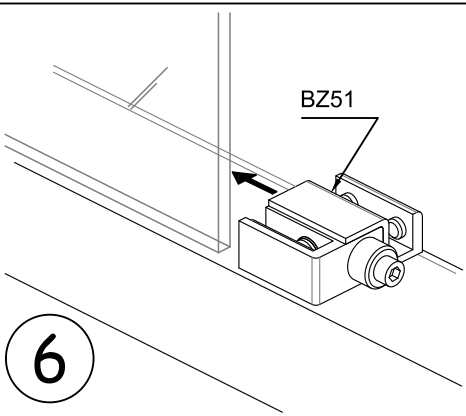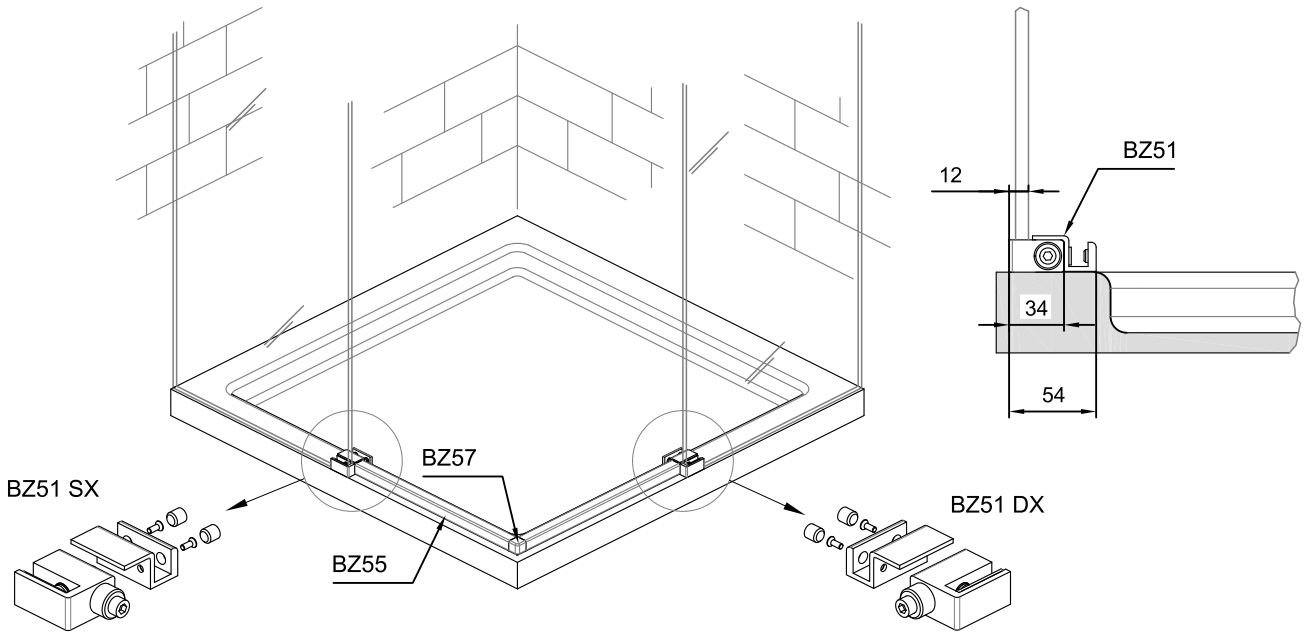

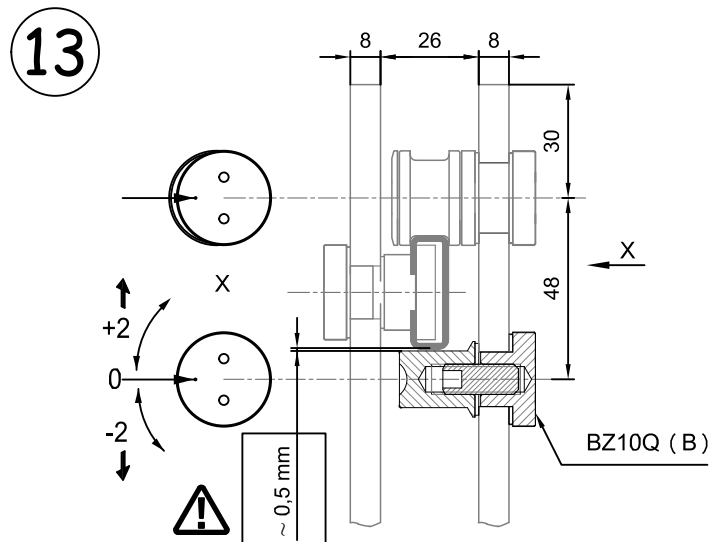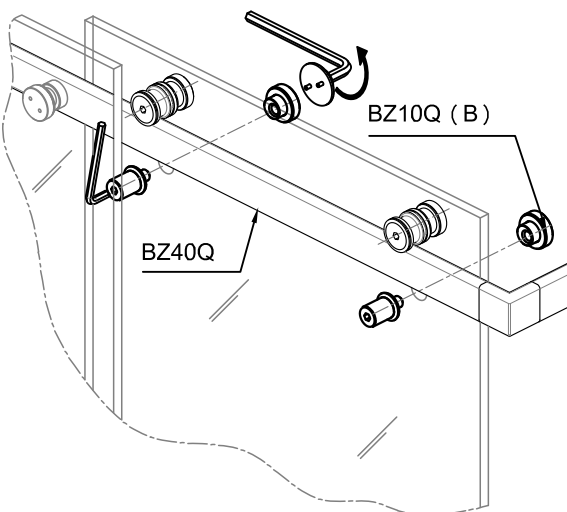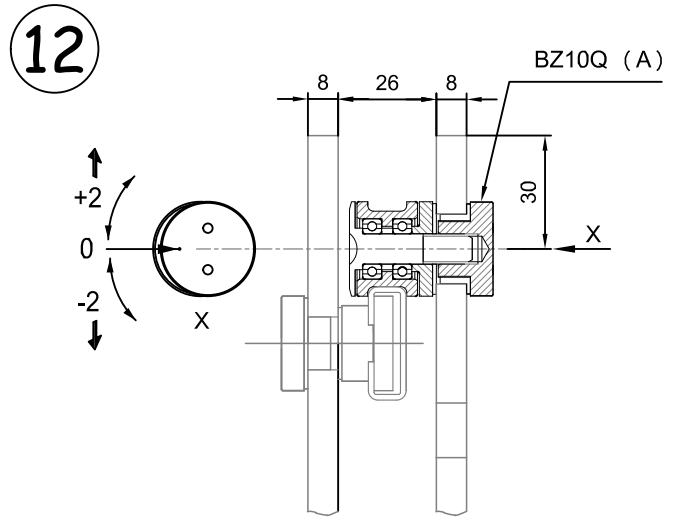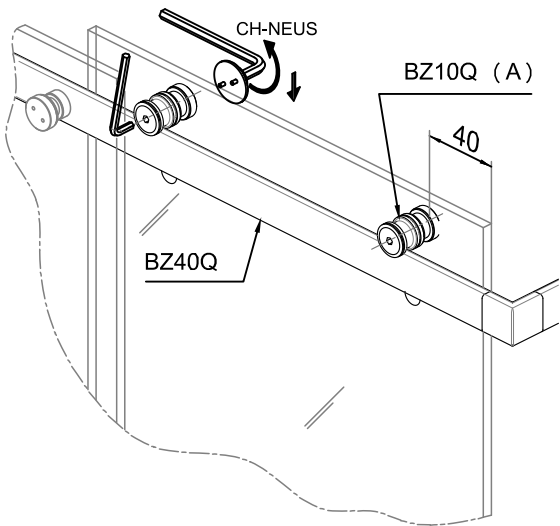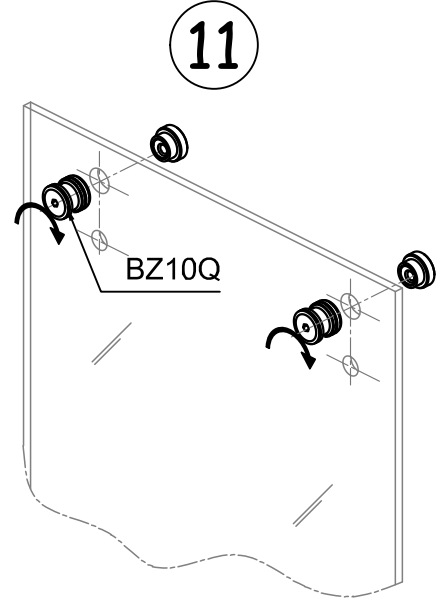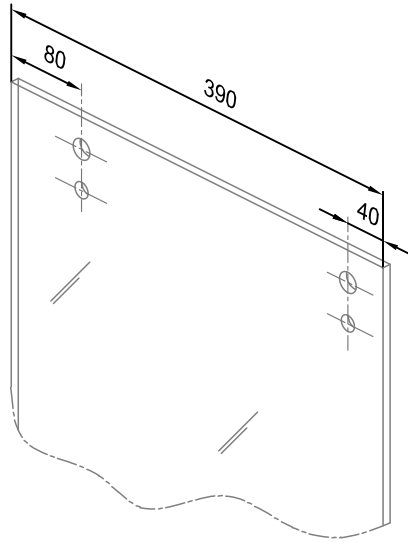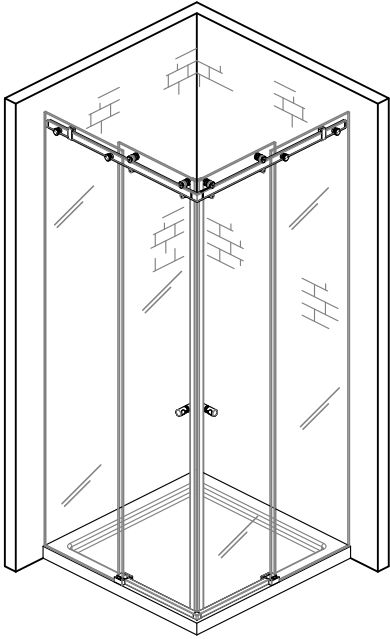

14

