


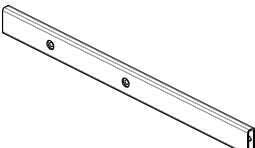

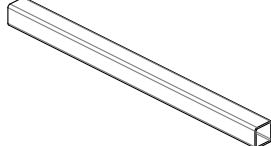
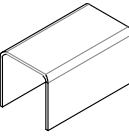


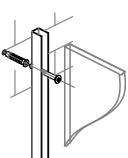
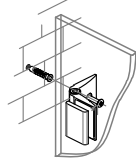


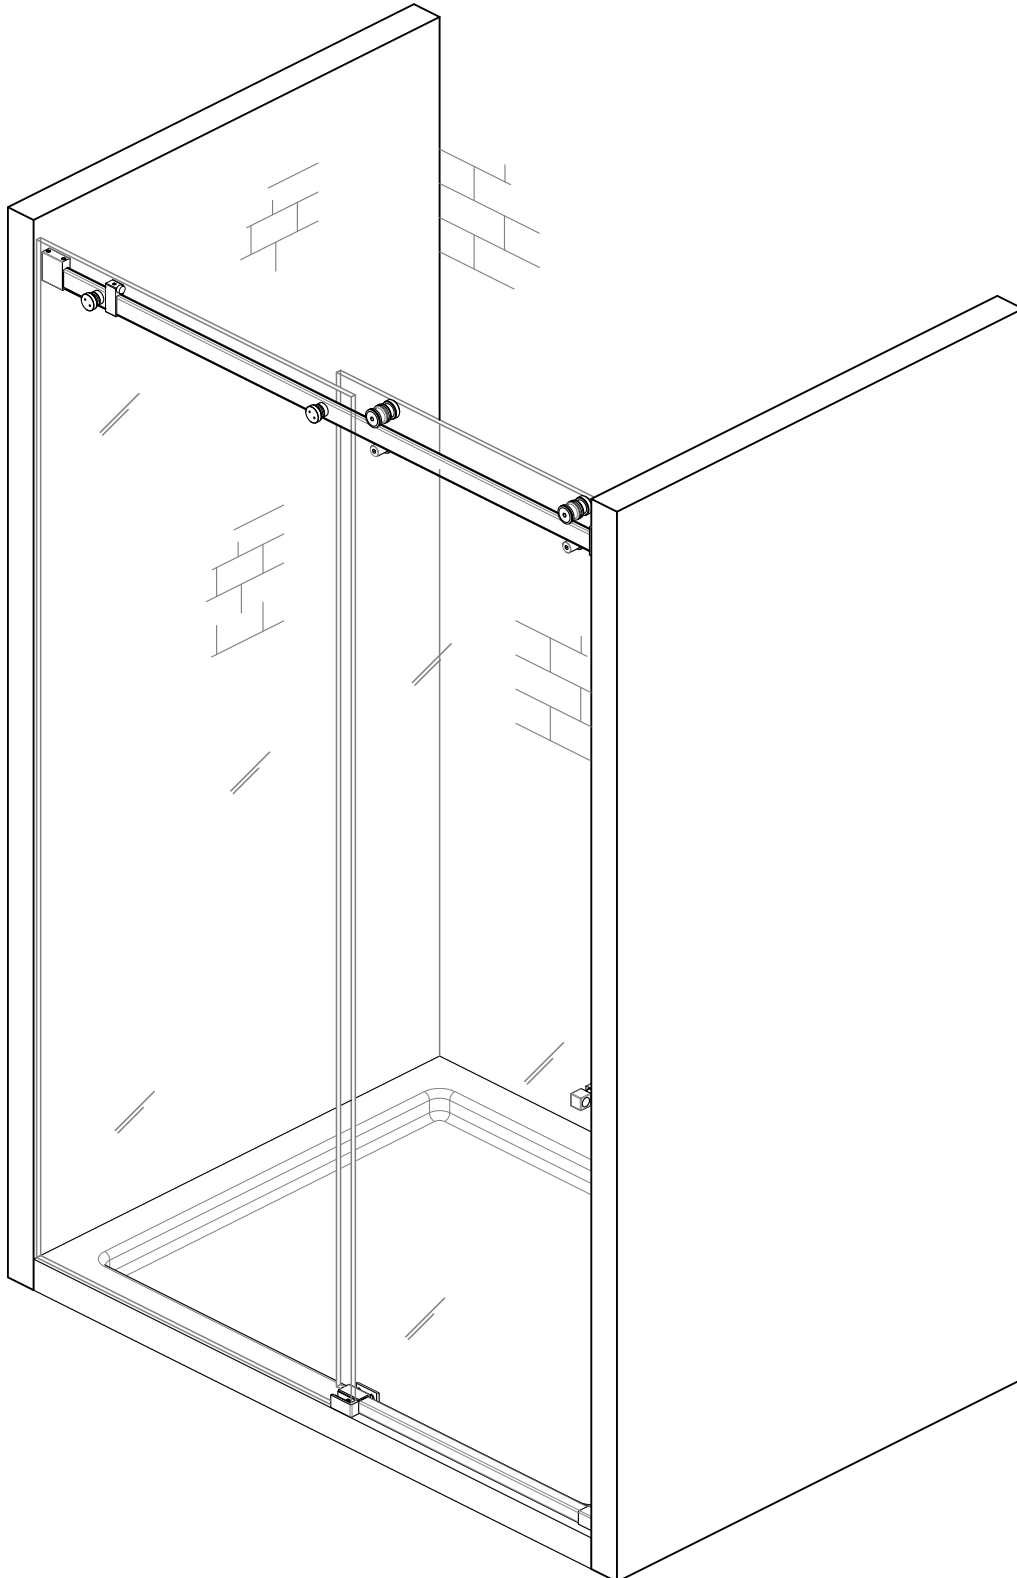


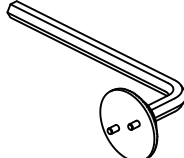
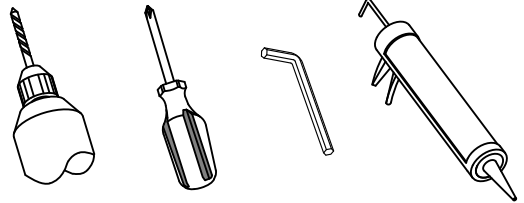

BZQ3  
SHOWER BOXE "HIP ZAC"  
NICHE KIT - SQUARE SECTION




Installation instructions



Packing List	
	BZ10Q 2 X
	BZ30Q 1 X
	BZ43Q 2 X
	BZ51 1 X
	BZ58 1 X
	BZ60 1 X
	BZ70Q 2 X
	BZ90Q 2 X

Optionals parts				
				
8P08	4428	5Q12	8PT160-61	8PT8-25

Tools supplied	Tools required	Fittings required
 CH-NEUS		 n x


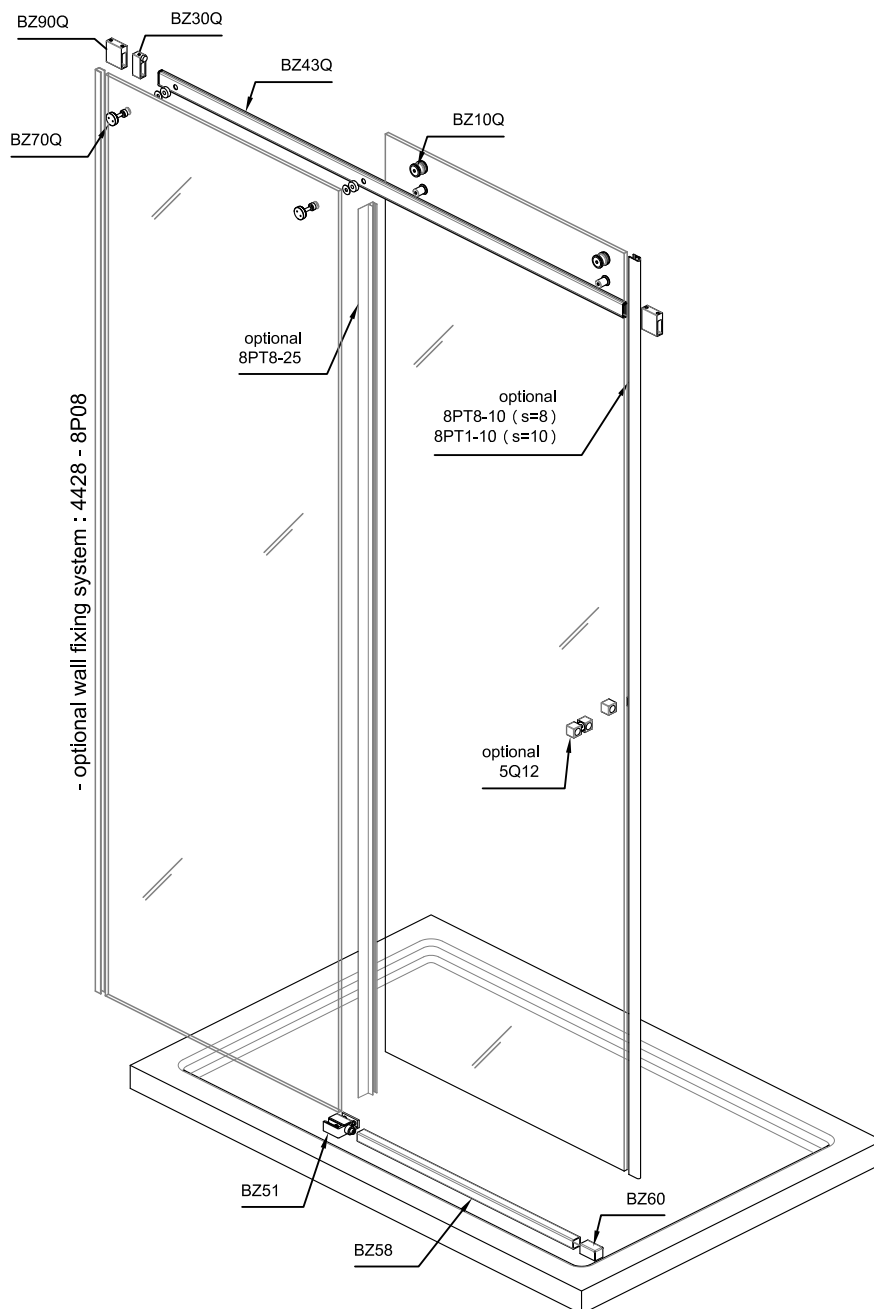







1






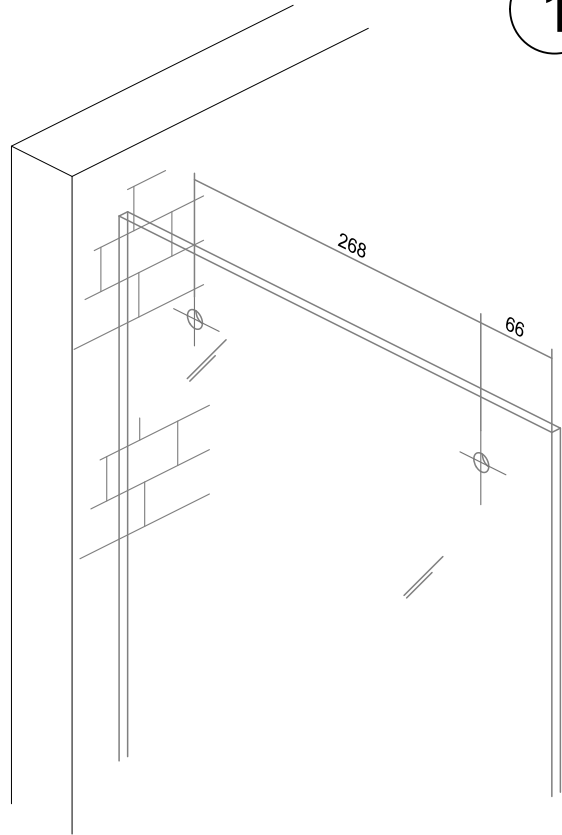
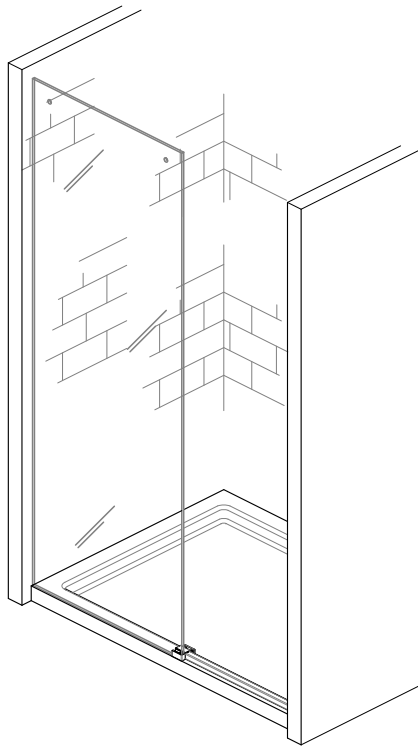


<p>n x</p>	<p>optional 8P08</p>	<p>1A</p>	<p>8P08</p> <p>5</p>
------------	----------------------	-----------	----------------------

<p>2 x</p>	<p>optional 4428</p>	<p>1B</p>	<p>4428</p>
------------	----------------------	-----------	-------------

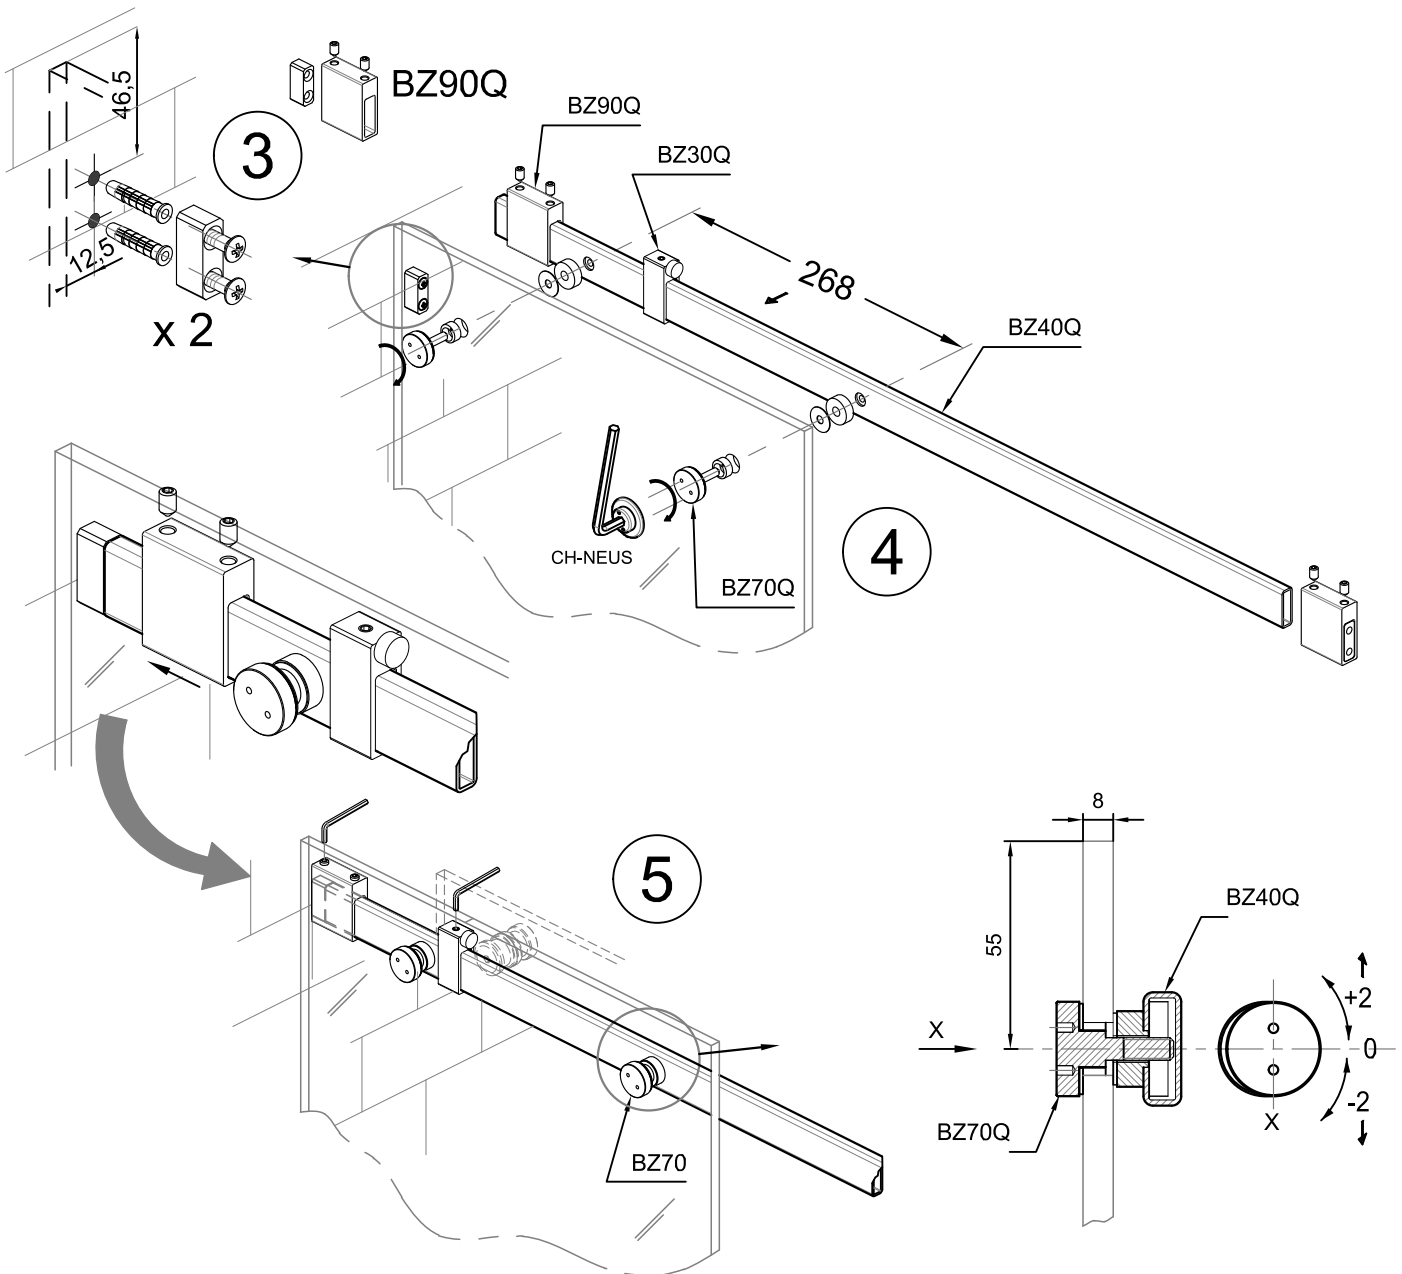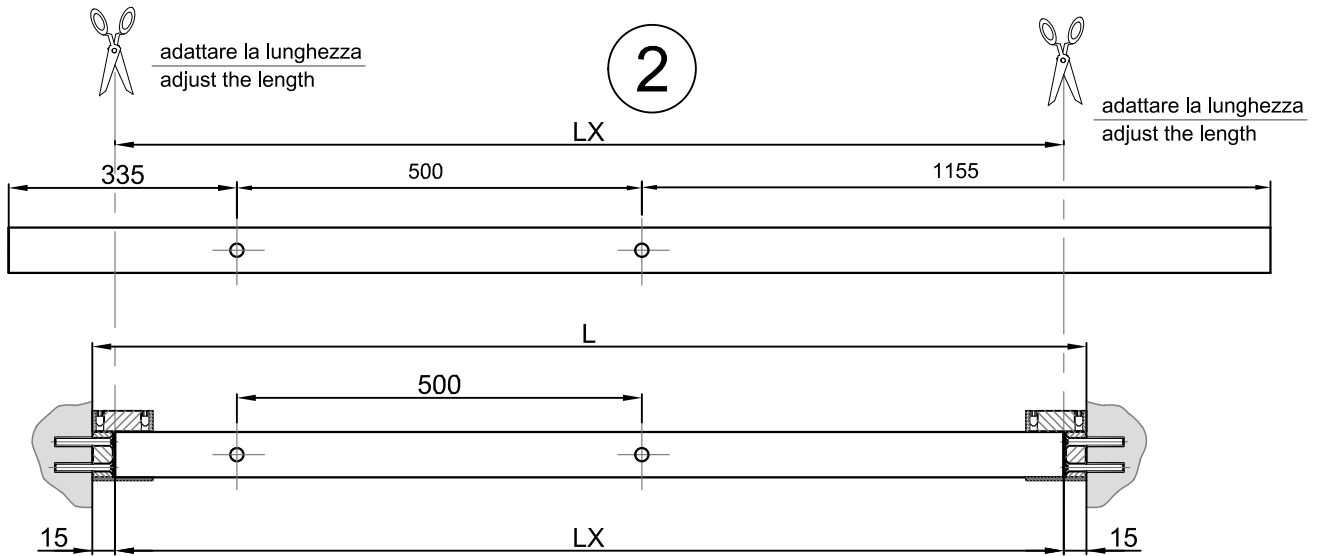

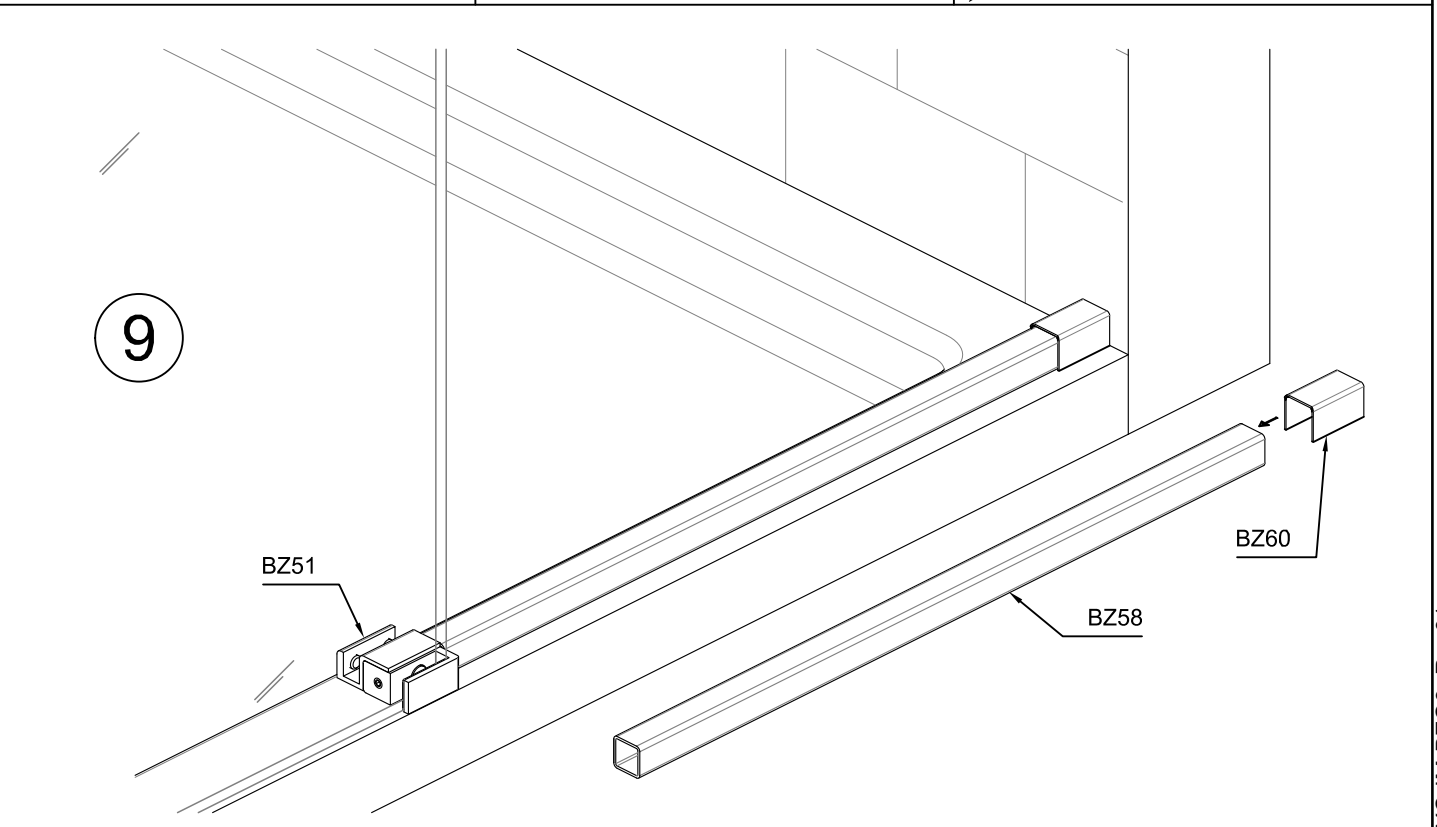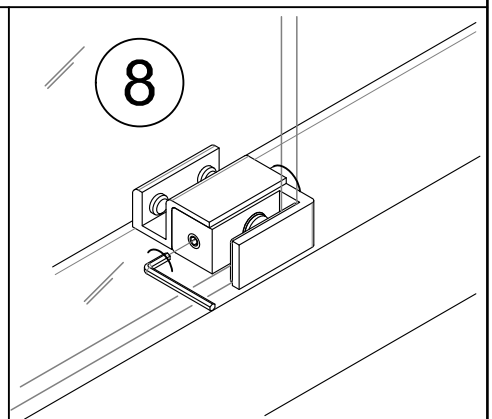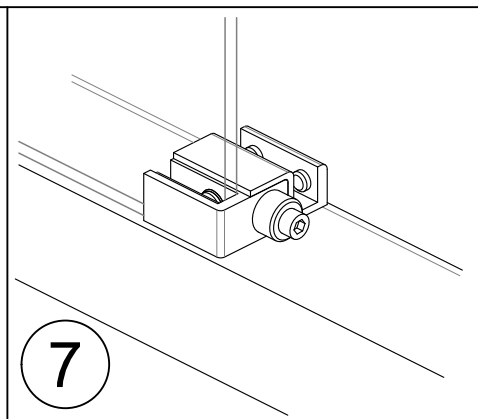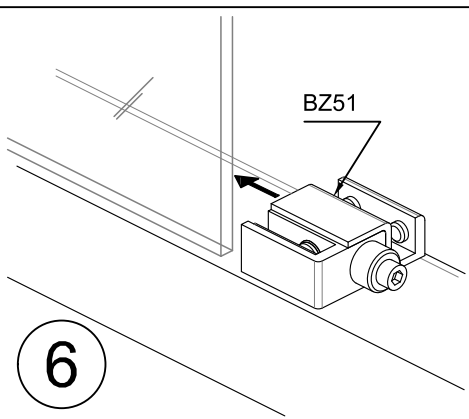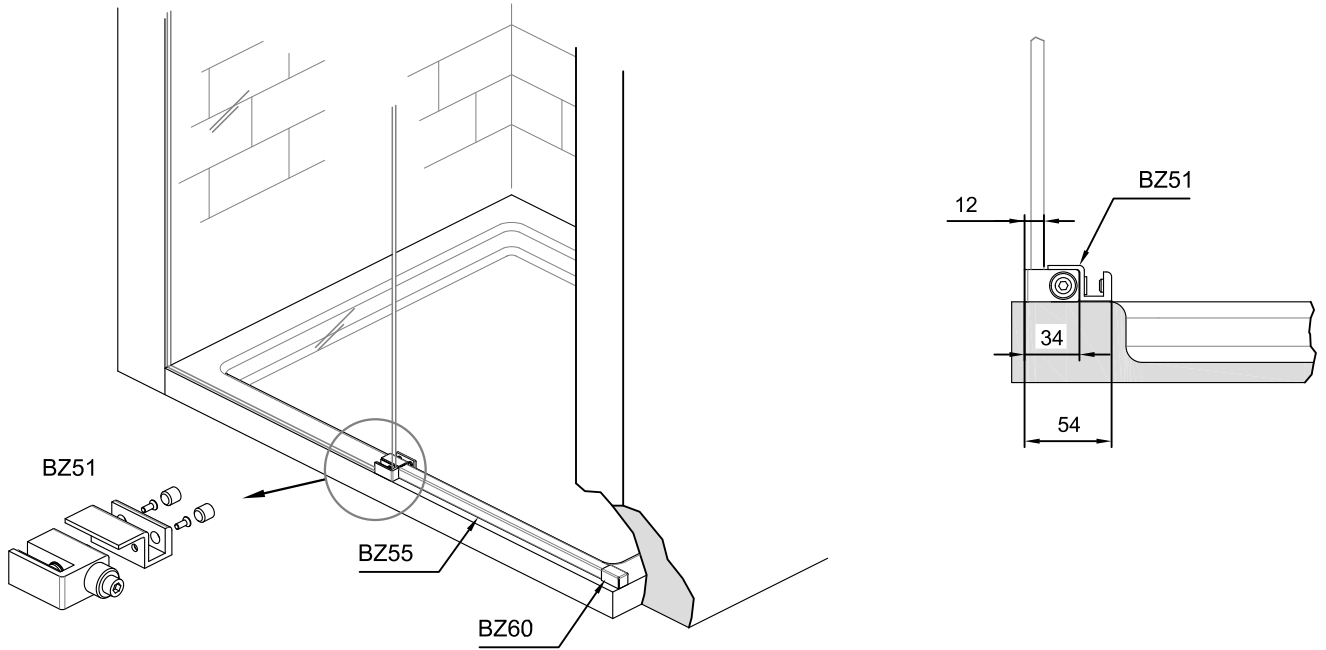

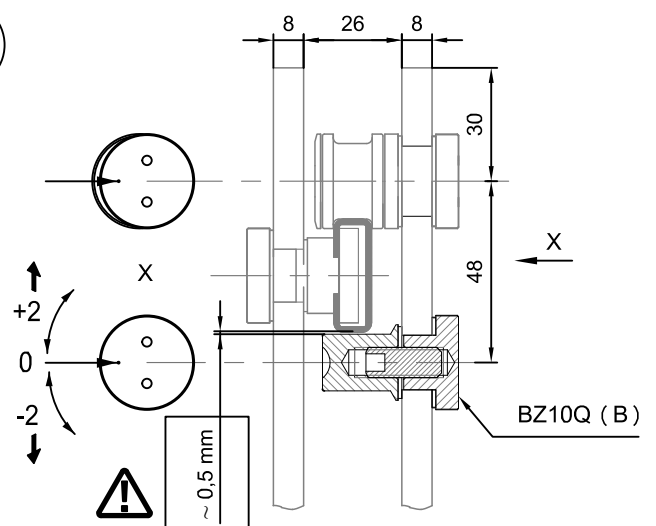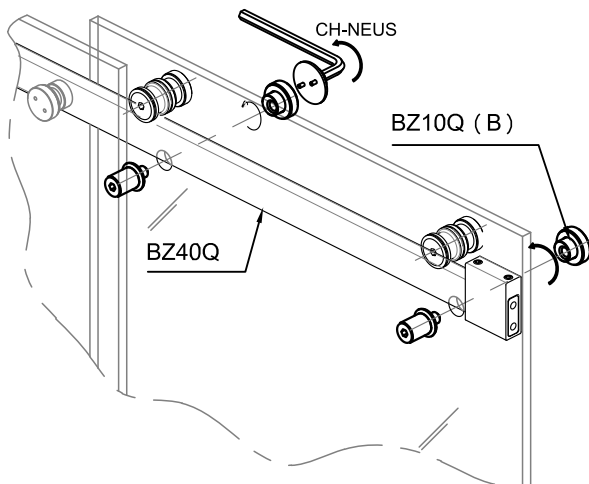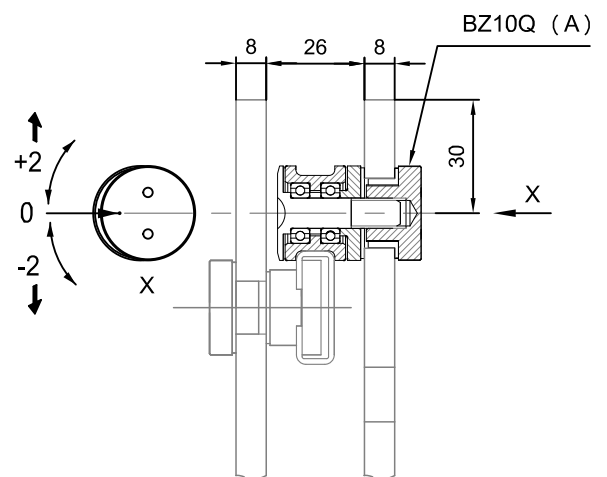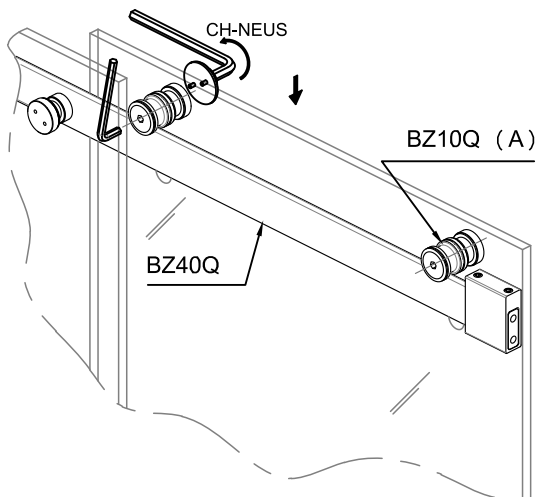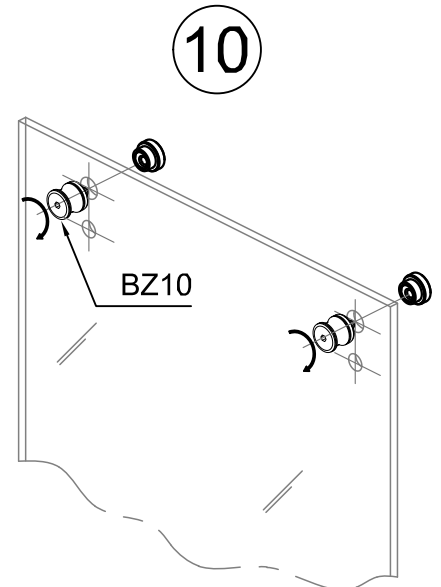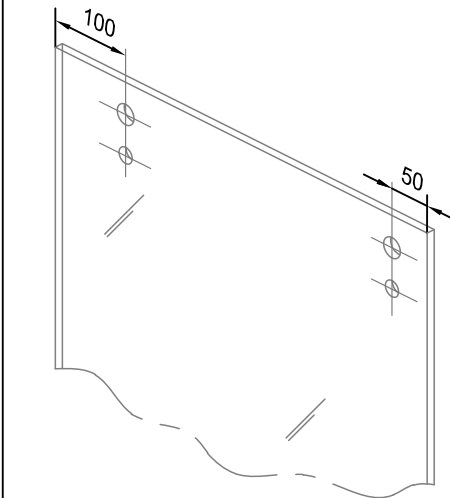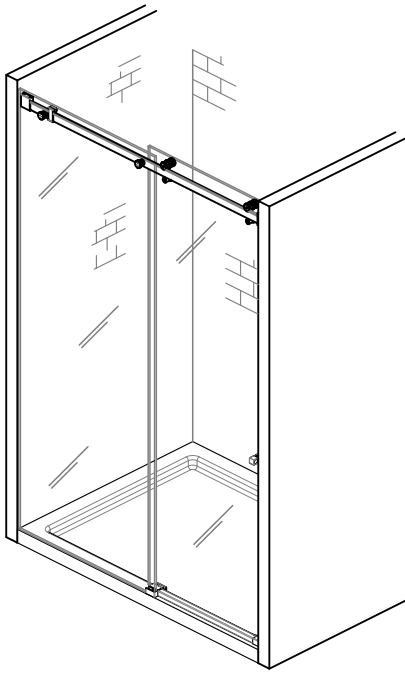

13

