

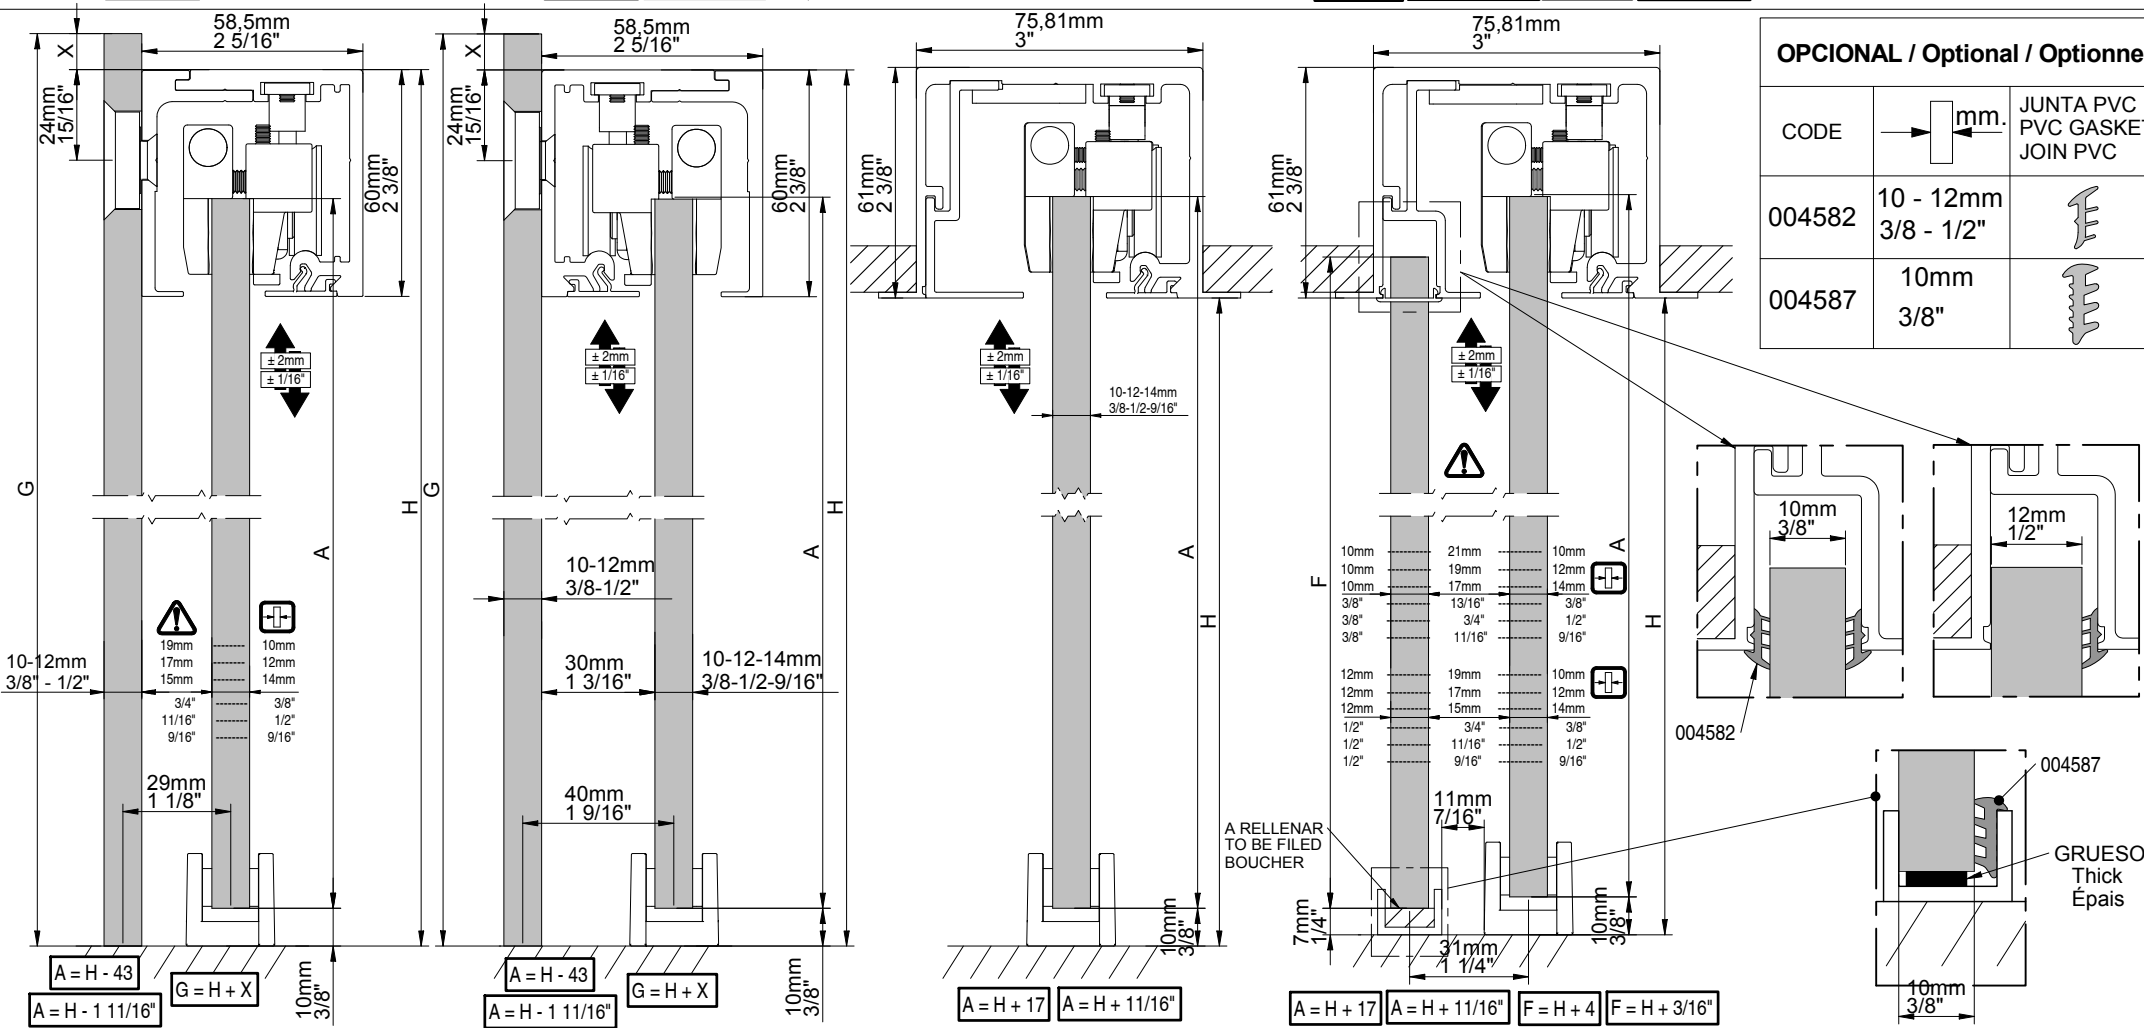



Z		1
U		1
K		1
t		1
CLAMPS (SOFTPRO)		
Y		2
ANTI-SHOCK		
X		2
RETENEDOR		
S		2
SOFTPRO SIMPLE		
V		1
SOFTPRO DOUBLE		
r		1

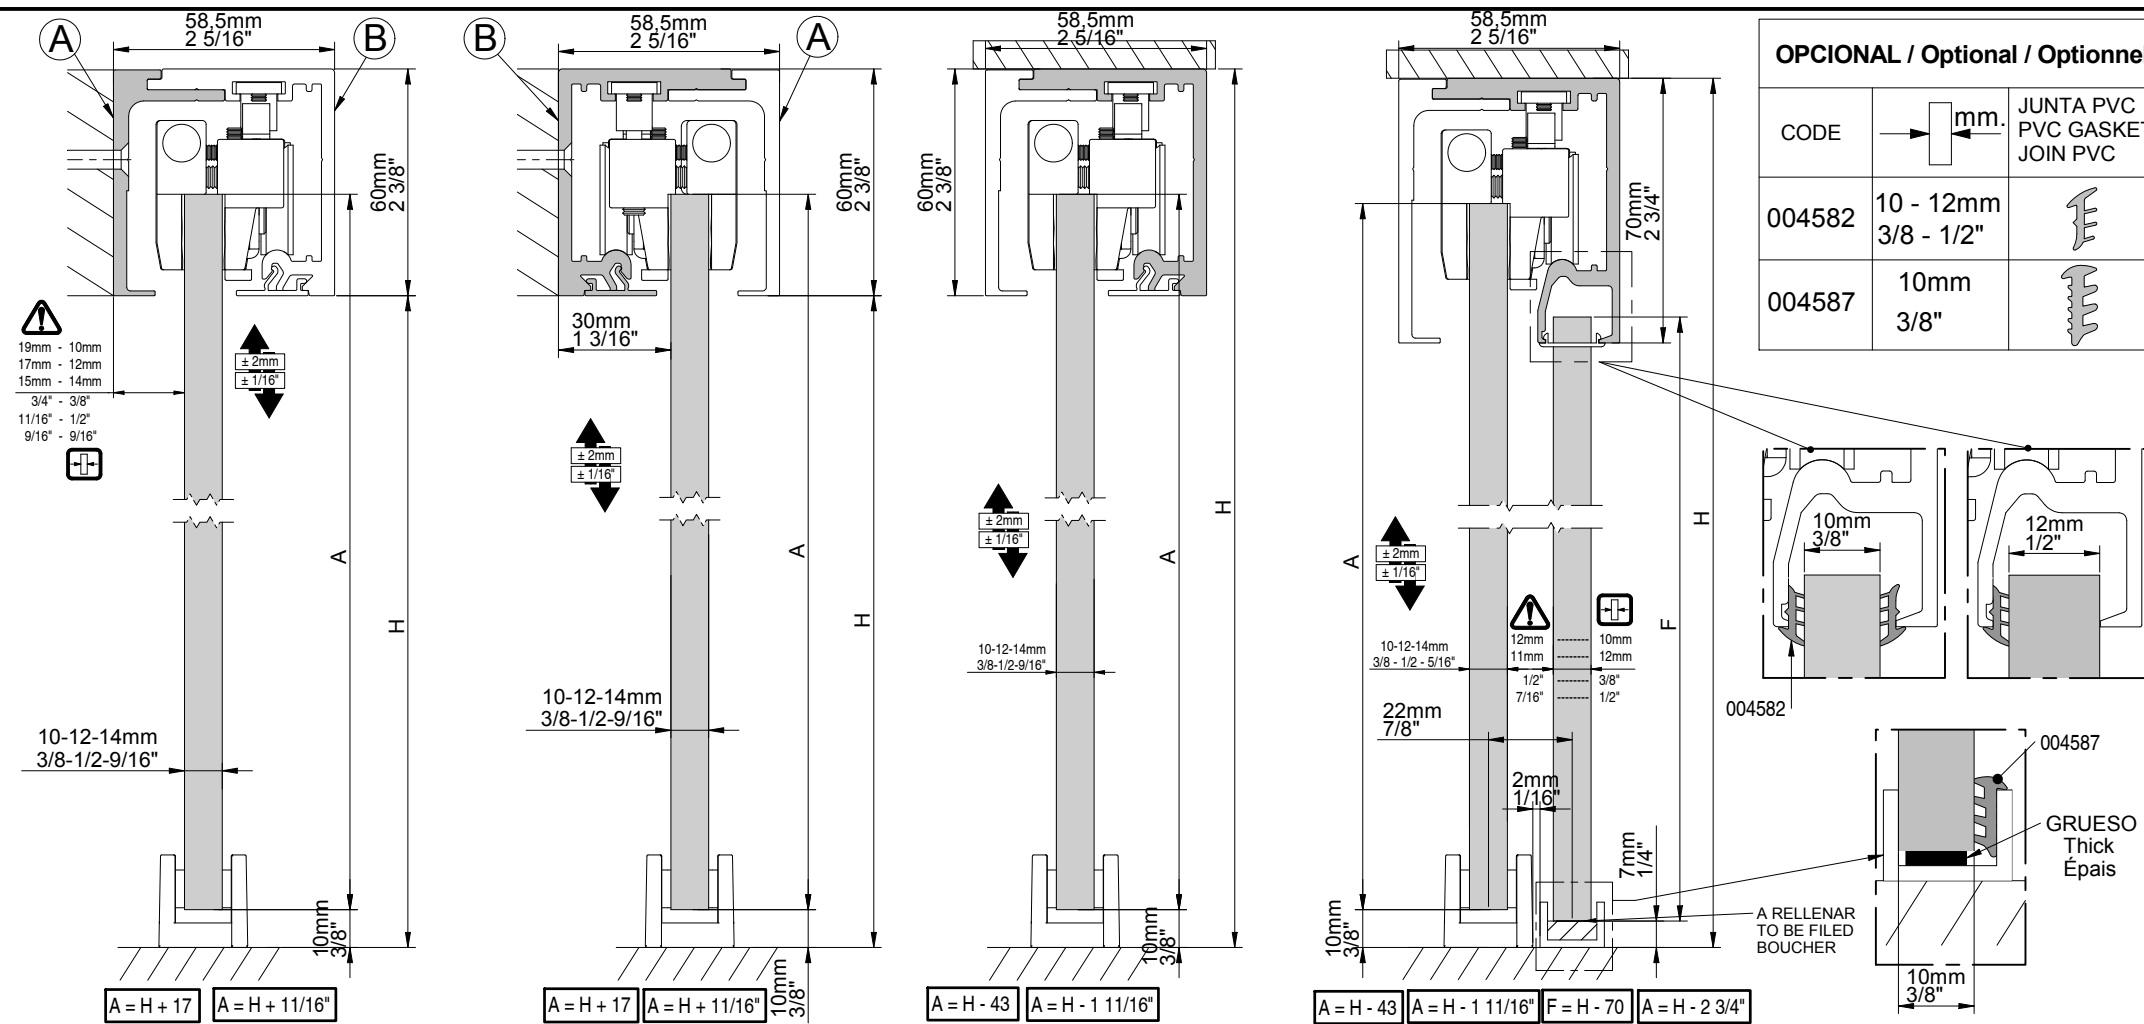


MONTAJE PINZAS / CLAMPS ASSEMBLY / ASSEMBLAGE PINCES / MONTAGGIO PINZA

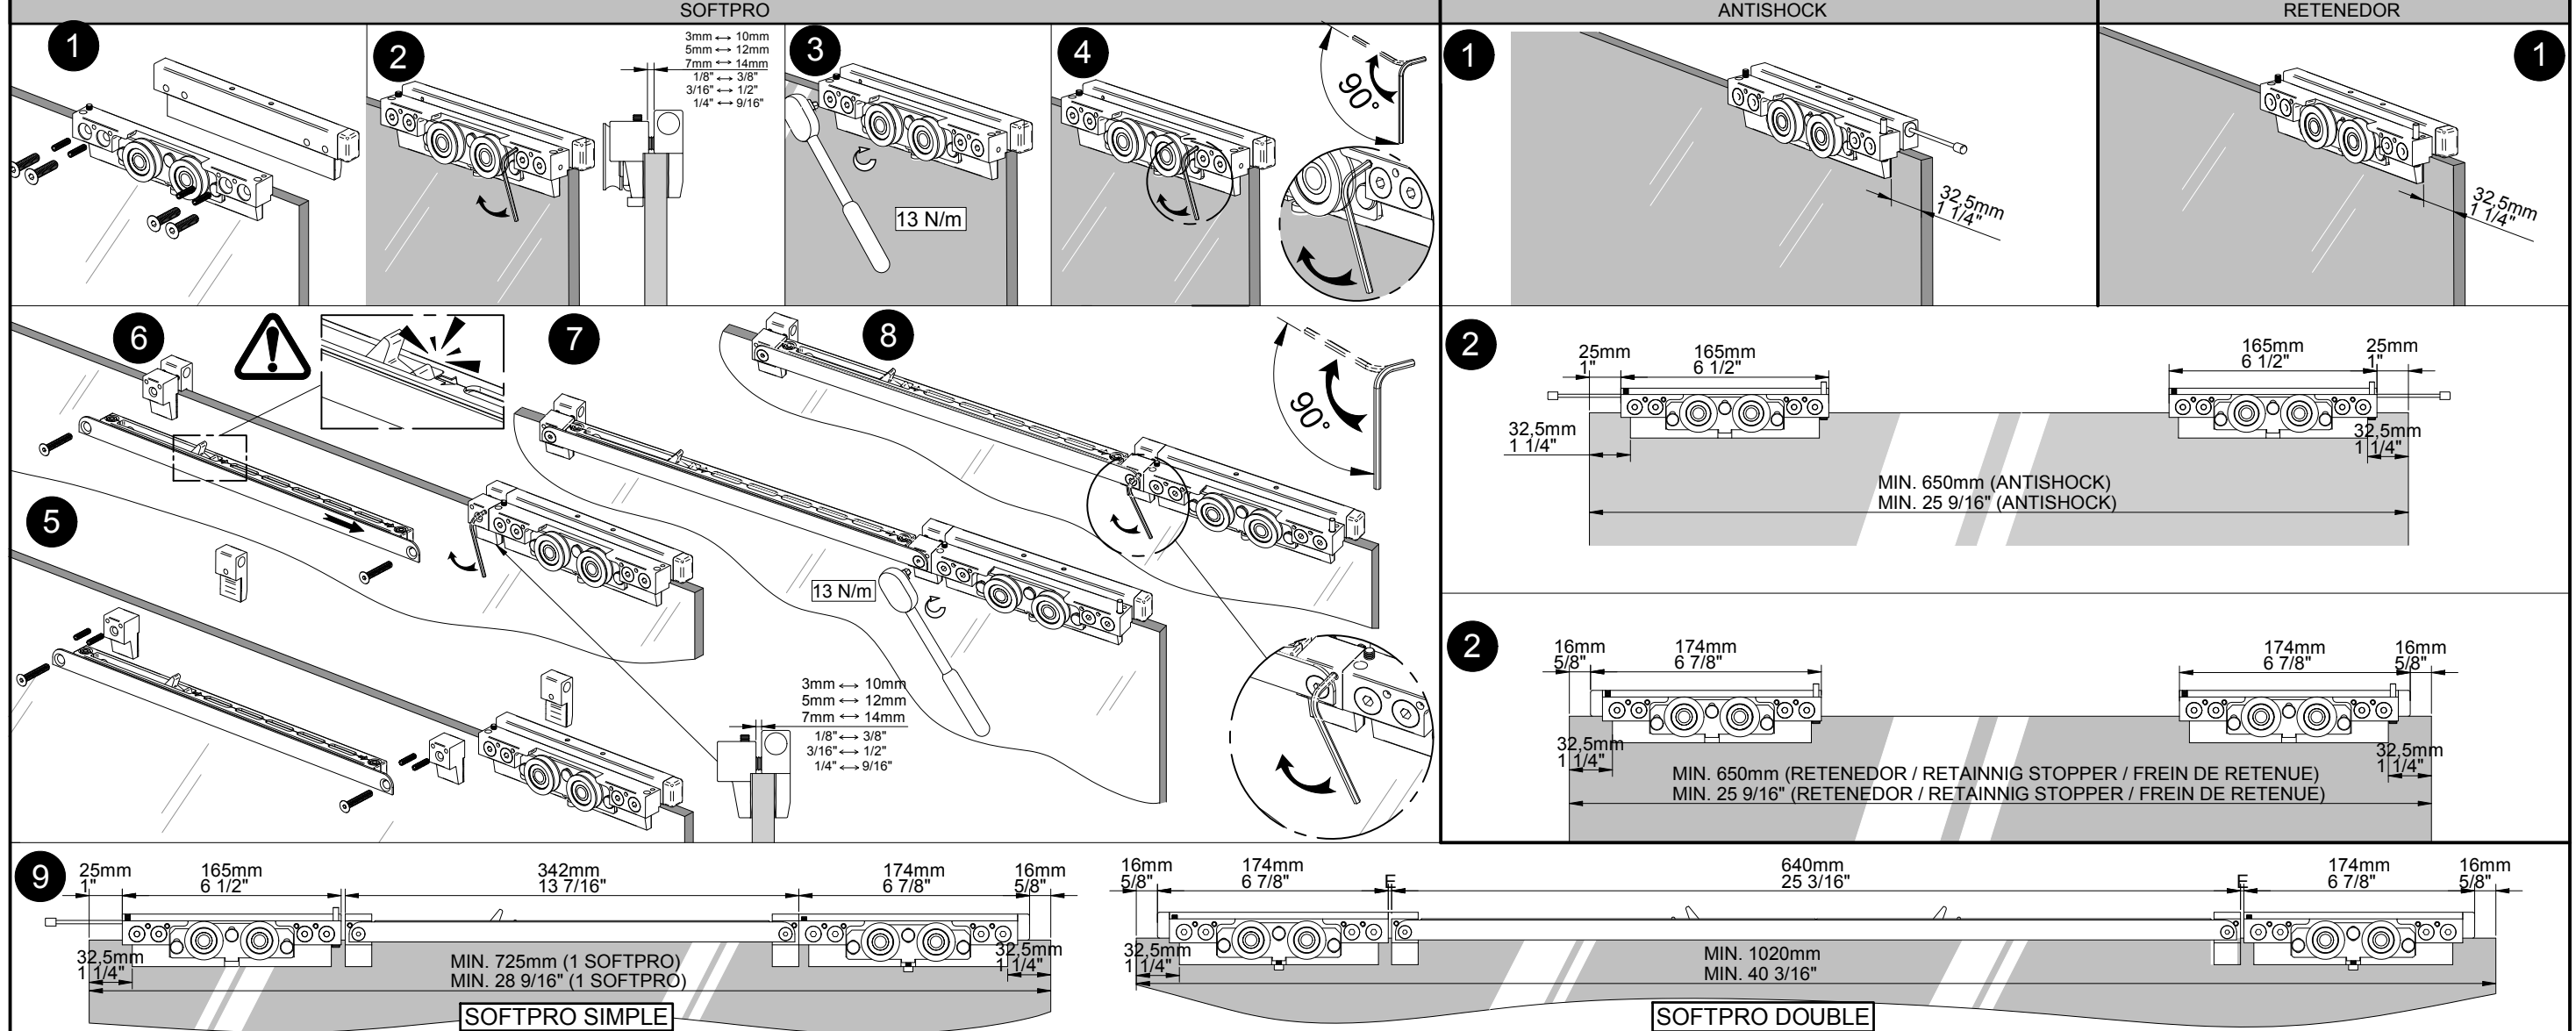


MONTAJE SOFTPRO IZQUIERDA / DERECHA
Softpro Left / Right assembly - Assemblage Droite / Gauche





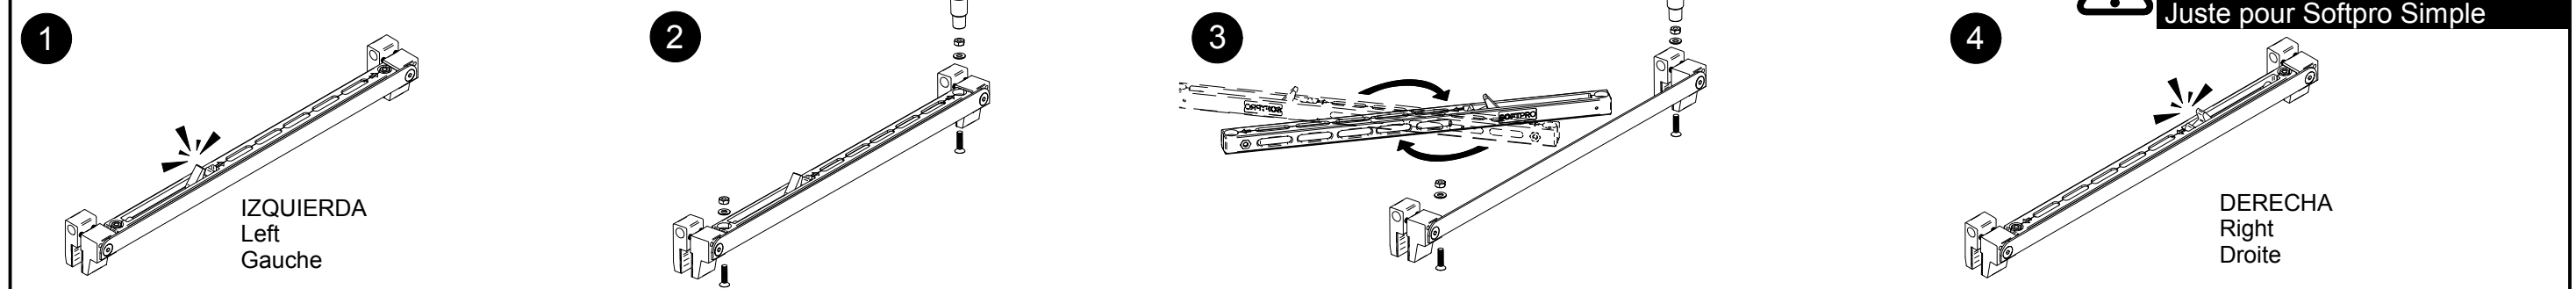


MONTAJE A PARED / WALL MOUNT / ASSEMBLAGE A MUR / MONTAGGIO A MURO







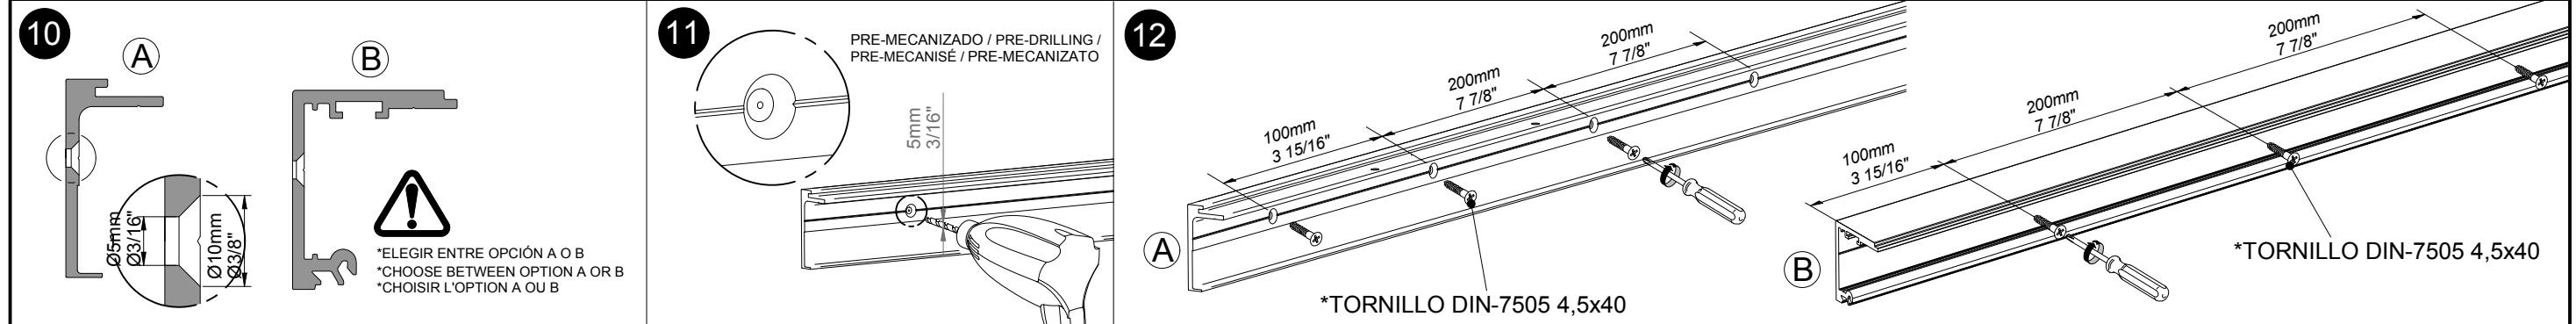


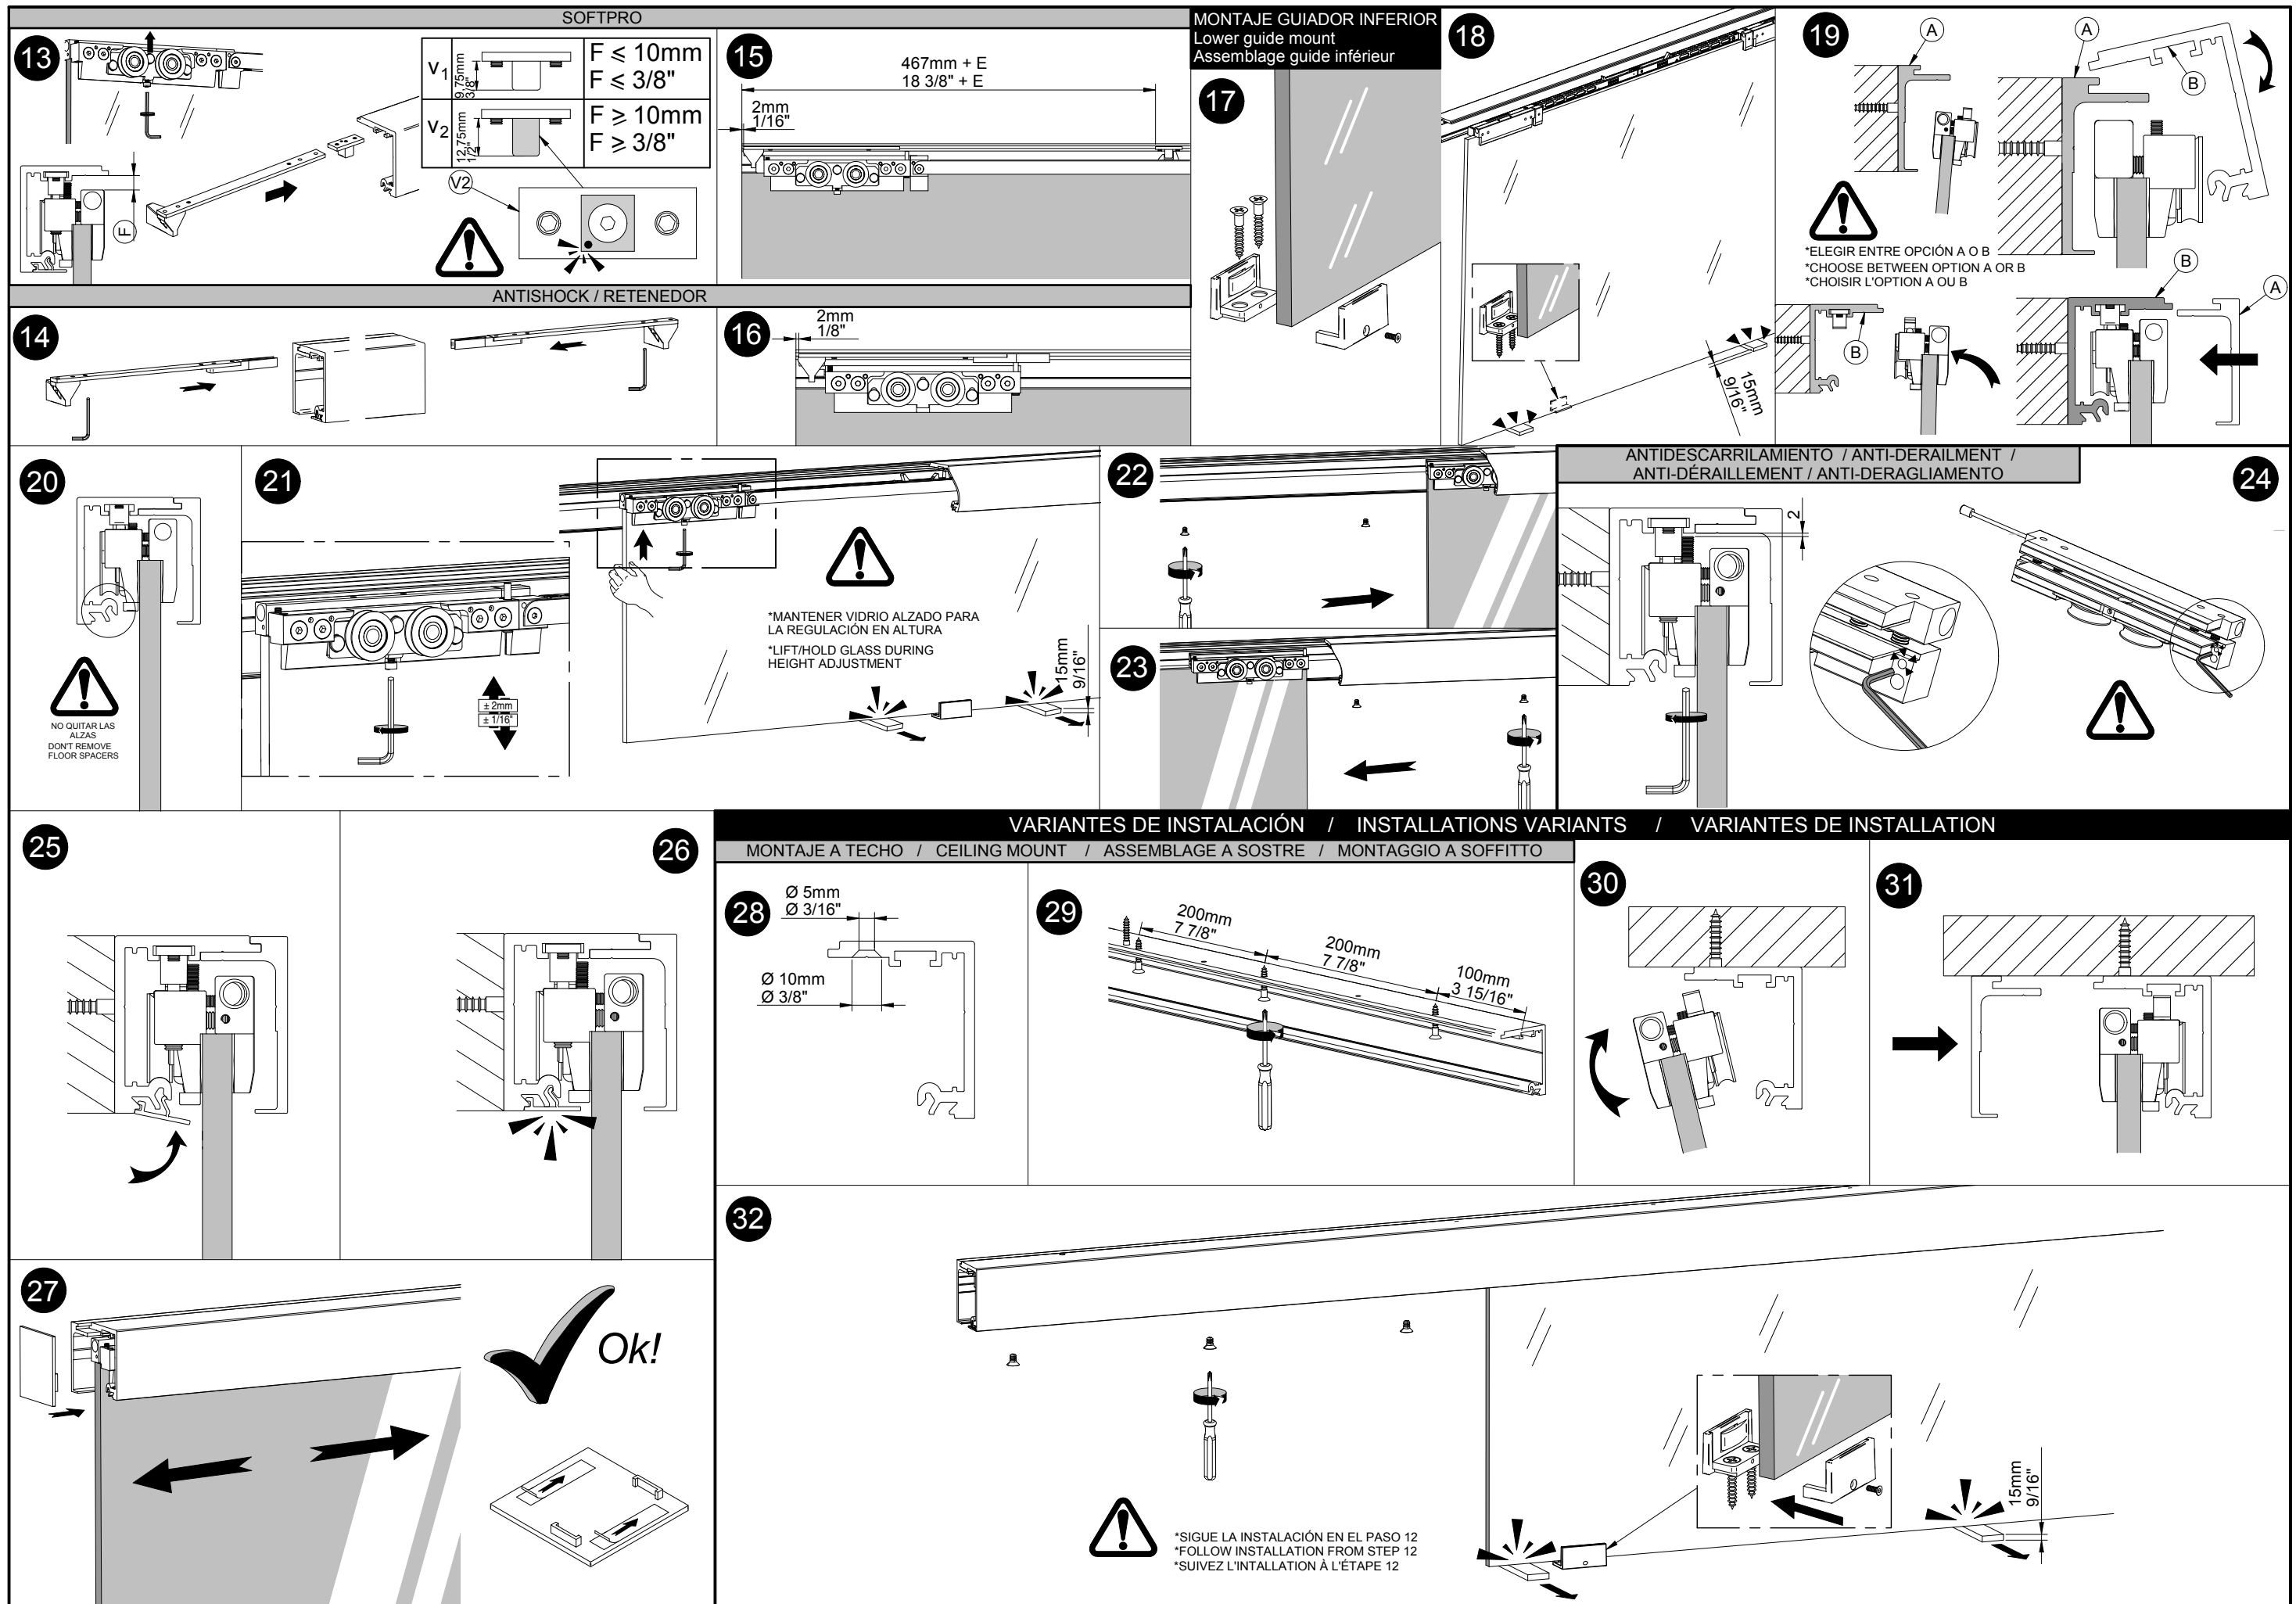




MONTAJE A TECHO CON VIDRIO FIJO / CEILING MOUNT WITH FIXED GLASS /
 ASSEMBLAGE A SOSTRE AVEC VERRE FIXE / MONTAGGIO CON VETRO FISSO

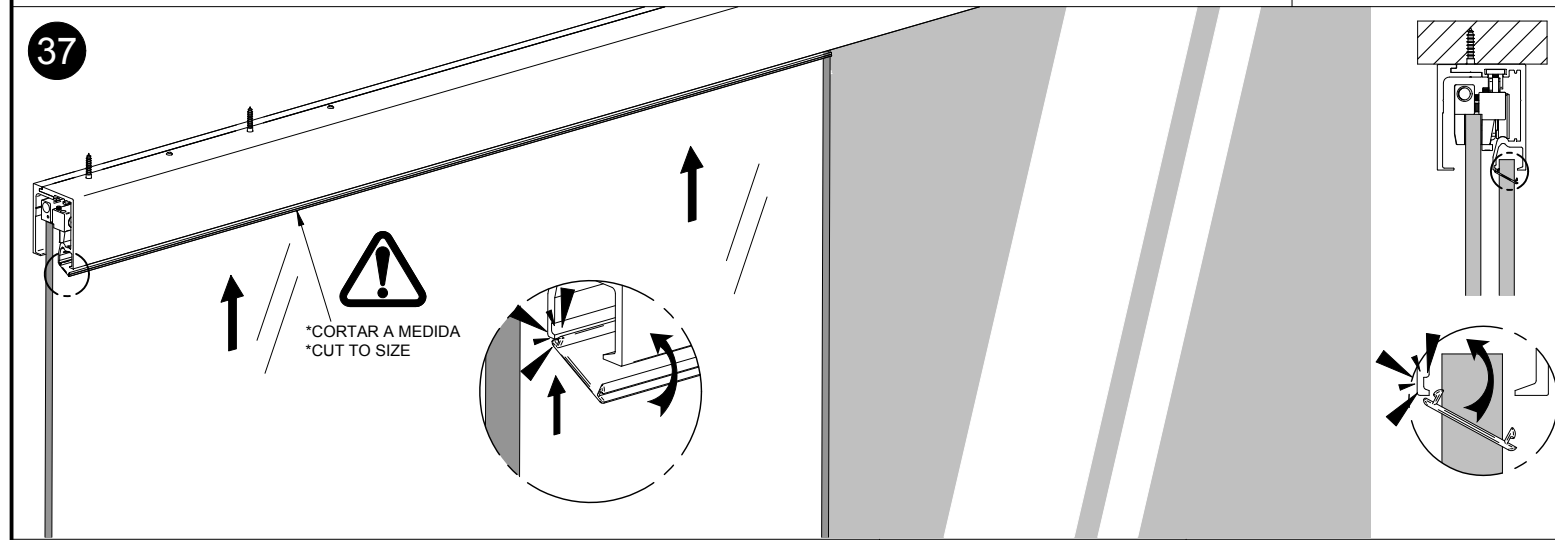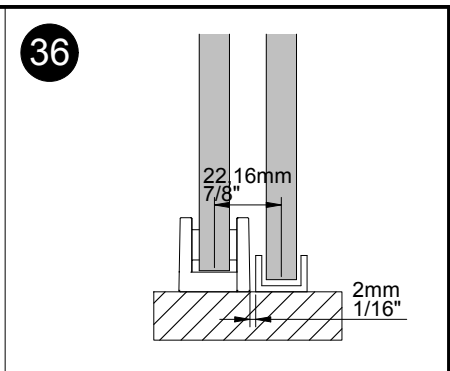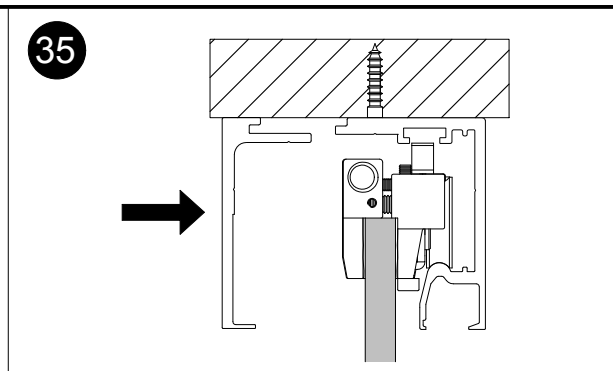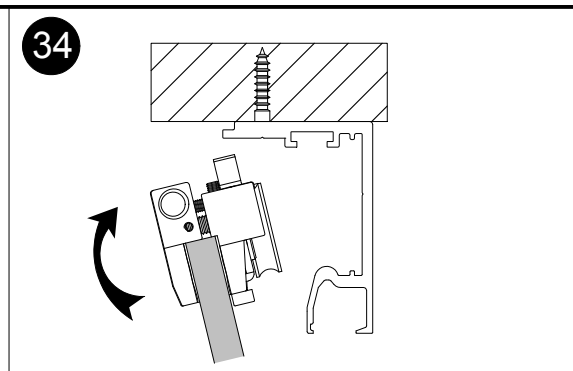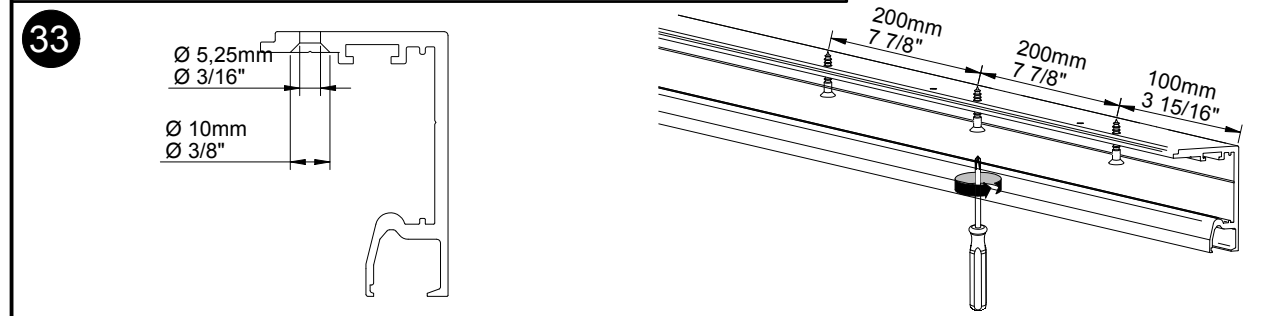


MONTAJE A PARED DE VIDRIO / GLASS WALL MOUNT / ASSEMBLAGE A MUR DE VERRE / MONTAGGIO A MURO DE VETRO

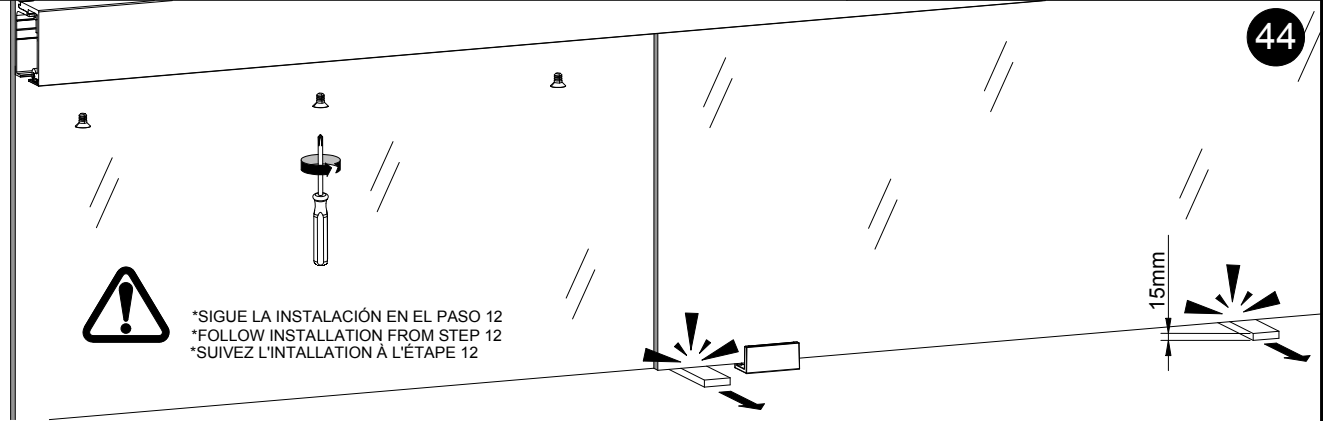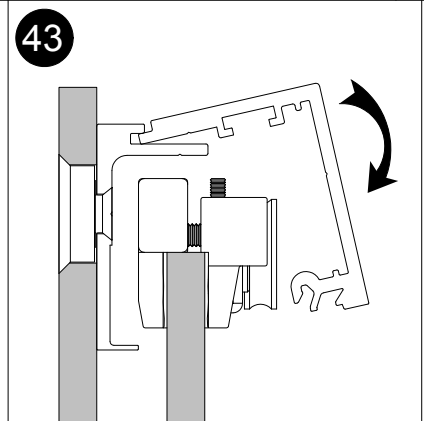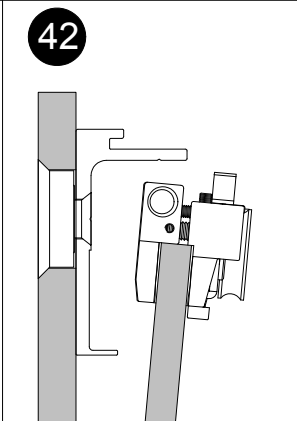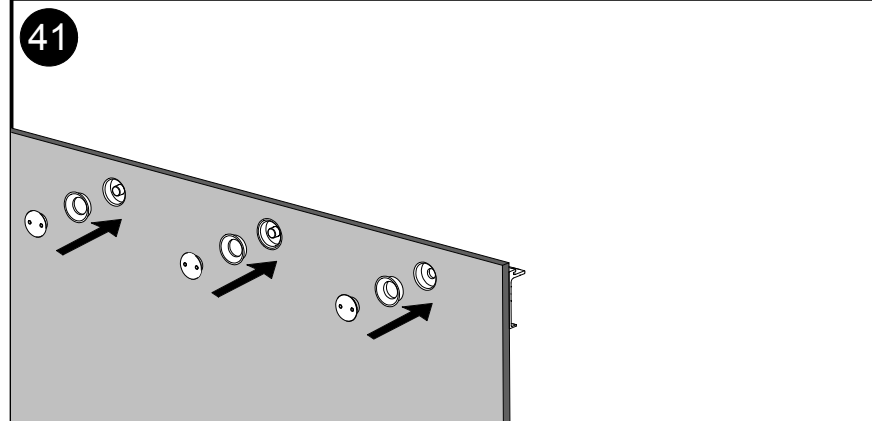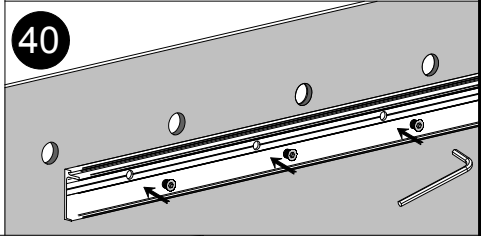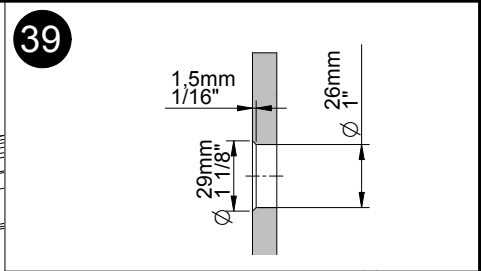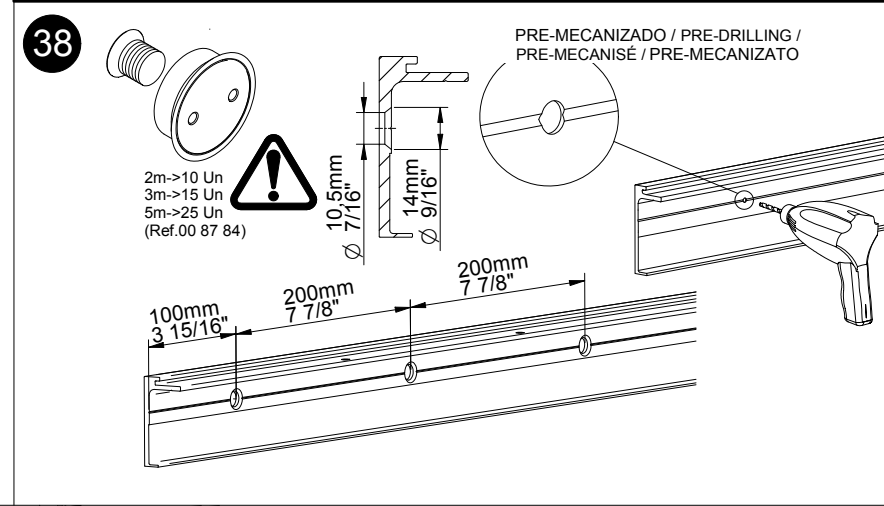

MONTAJE A FALSO TECHO / FALSE CEILING MOUNT / ASSEMBLAGE FAUX PLAFOND / MONTAGGIO A FALSO SOFITTO

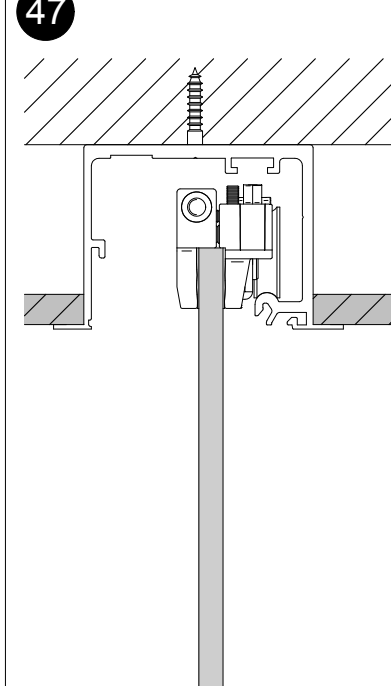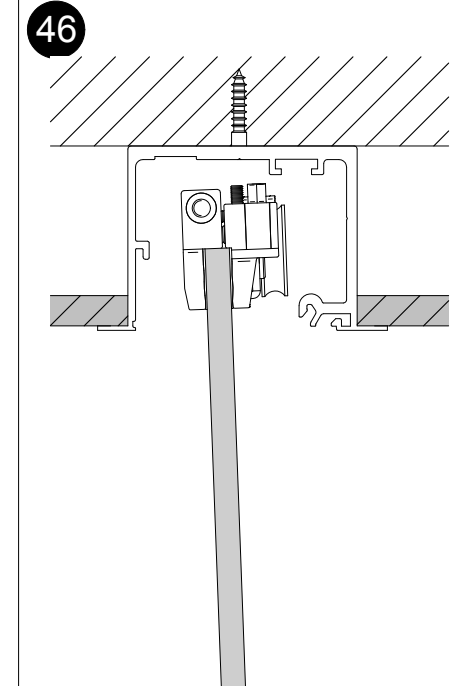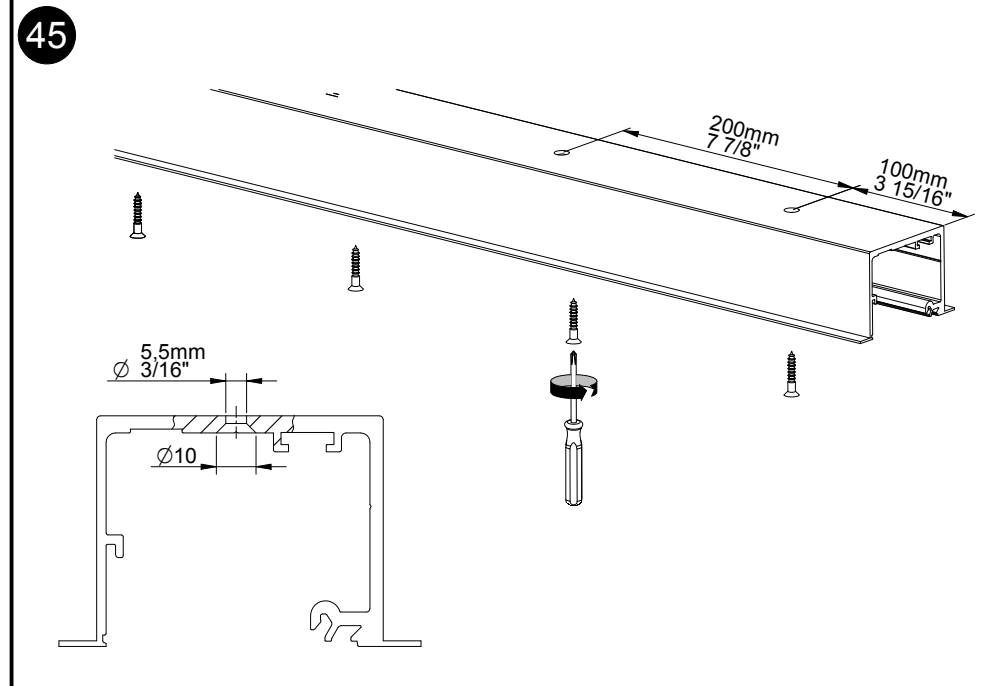

SIN VIDRIO FIJO / WITH FIX GLASS / AVEC VERRE FIXE / CON VETRO FISSO

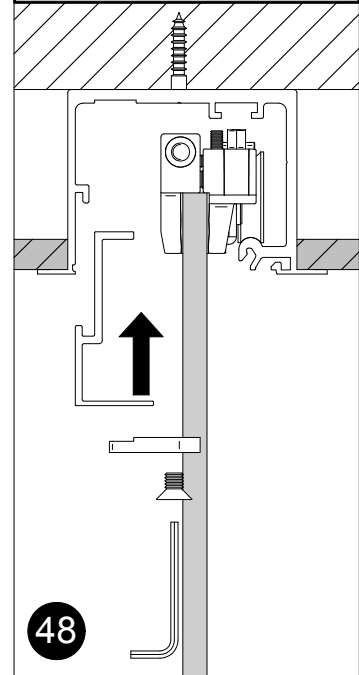

CON VIDRIO FIJO / WITHOUT FIX GLASS / SANS VERRE FIXE / SIN VETRO FISSO

